



RAVENNA Network Guide

For Merging Technologies Products



No part of this documentation may be reproduced in any form whatsoever or be stored in any data retrieval system without prior written permission of the copyright owners.

This documentation is supplied on an as-is basis. Information contained within this documentation is subject to change at any time without notice and must not be relied upon.

All company and product names are [™] or Registered Trademarks [®] of their respective owners. Windows 7 is a trademark of Microsoft Corporation. Bonjour, the Bonjour logo, and the Bonjour symbol are trademarks of Apple Computer, Inc. RAVENNA is a registered trademark of ALC NetworkX GmbH and is used here under licence.

Merging Technologies makes no warranties express or implied regarding this software, its quality, performance, merchantability or fitness for a particular purpose. The software is supplied “as is” you, the purchaser, are assuming the entire risk of the results of using this Merging Technologies software.

In no circumstances will Merging Technologies, its owners, directors, officers, employees or agents be liable to you for any consequential, incidental or indirect loss or damages including loss of time, loss of business, loss of profits, loss of data or similar resulting from the use of or inability to use the Merging Technologies hardware and or software or for any defect in the hardware software or documentation.

Product features and specifications are subject to change without notice.

© Copyright Merging Technologies Inc. 2015. All rights reserved



RAVENNA Network Guide

For Merging Technologies Products

Contents

1 Introduction	5
Scope	5
2 Read First!	6
3 Introduction to RAVENNA Technology	7
4 MT Discovery	10
Overview	10
Using MT Discovery	11
Additional Information	12
5 Merging RAVENNA Easy Connect	13
Accessing Easy Connect	13
Additional Details	17
6 TimeCode	19
TimeCode Setup	19
Setup Examples	24
7 Network Switch	30
Certified switch	30
Before Starting	30
Dell Power Connect 2816 Switch Auto-configuration Procedure	31
Dell Power Connect Manual Switch Configuration	41
Switch Configuration	46
Connecting Multiple Horus' to the Switch	54
8 Contacting Merging	55
International Office:	55
UK:	55
USA:	55
9 Index	56

RAVENNA Network Guide

For Merging Technologies Products



Document: RAVENNA Network Guide rev10

Date: 18th March 2015



1 Introduction

RAVENNA is a solution for real-time distribution of audio and other media content in IP-based network environments. It was designed primarily by a company called ALC NetworX. RAVENNA utilizes standardized network protocols and technologies and can operate in existing network infrastructures. Performance and capacity scale with the capabilities of the underlying network architecture.

For more information about RAVENNA technology **please see: Introduction to RAVENNA Technology on page 7** and:

<http://ravenna.alcnetworx.com/>

Scope

This document contains information about Merging Technologies RAVENNA systems. It has an introduction to RAVENNA technology and details about the two helper applications **MT Discovery** and **Merging RAVENNA Easy Connect**. There is also information about implementing more complex systems requiring a network switch.

For detailed information about the **Horus** interface and **Pyramix** and **Ovation** software please see their specific Guides.



2 Read First!

Important! Do not connect anything other than RAVENNA devices to the Merging Technologies PCIe Ethernet Controller Card NET-MSC-GBEX1. The same applies when the connection from the card goes via the Merging certified Dell Power Connect 2816 switch.

Important! Please avoid changing a network address or disconnecting Ethernet ports on your system when MassCore RAVENNA is running. It is possible that this will cause your Horus connection to reset and result in gaps in your recording.



3 Introduction to RAVENNA Technology

Scope

The information in this chapter is provided as background of the philosophy and technology behind RAVENNA.

Overview

RAVENNA is a technology for real-time distribution of audio and other media content in IP-based network environments. Utilizing standardized network protocols and technologies, RAVENNA can operate on existing network infrastructures. RAVENNA is designed to meet the strict requirements of the pro audio market featuring low latency, full signal transparency and high reliability.


RAVENNA is suitable for deployment in many pro audio market segments including broadcast, live sound, studios the install market and location music recording. Possible fields of application include (but are not limited to) in-house signal distribution in broadcasting houses, theaters, concert halls and other fixed installations, flexible set-ups at venues and live events, OB van support, interfacility links across WAN connections and in production & recording applications.

In short, it represents a new take on the third generation form of audio interconnect, where the first generation of interconnect is analogue point-to-point copper, the second generation uses digital codes representing the analogue signal, conveyed point-to-point over copper or fibre-optic cabling and the third generation also employs digital codes representing the analogue audio but transported as packets over network infrastructure.

RAVENNA is very well suited to areas where complex audio routing / mixing systems are deployed. For example; in-house distribution in broadcasting centres and WAN connections to satellite studios, OB vans, where hook up to venues with the same infrastructure becomes simple, in venues themselves for local signal distribution and connection to just such OB vehicles when required. For live events and concerts it offers highly flexible temporary installation possibilities and in theatres, opera houses and houses of worship it can provide low cost local signal distribution. Notwithstanding all of the above, RAVENNA is also an excellent candidate for relatively simple point-to-point interconnects such as computer to audio interface.

However, RAVENNA, leaving aside the other advantages touted, is an open standard based on the ubiquitous IP protocol. Specifically, protocol levels on or above layer 3 of the OSI reference model. Since RAVENNA is purely based on layer 3 protocols, it can operate in most existing network environments. Unlike layer 1 or layer 2 solutions, it does not, in principle, require its own network infrastructure. IP can be therefore be transported on virtually any LAN and is used as the base layer for communication across WAN connections (including the internet). Although in most cases Ethernet will be deployed as the underlying data link layer, IP is in general infrastructure-agnostic and can be used on virtually any network technology and topology. All the protocols and mechanisms used in RAVENNA are based on well established and commonly used methods from the IT and audio industries and comply with various standards defined and maintained by the international standards bodies.

Basic Components

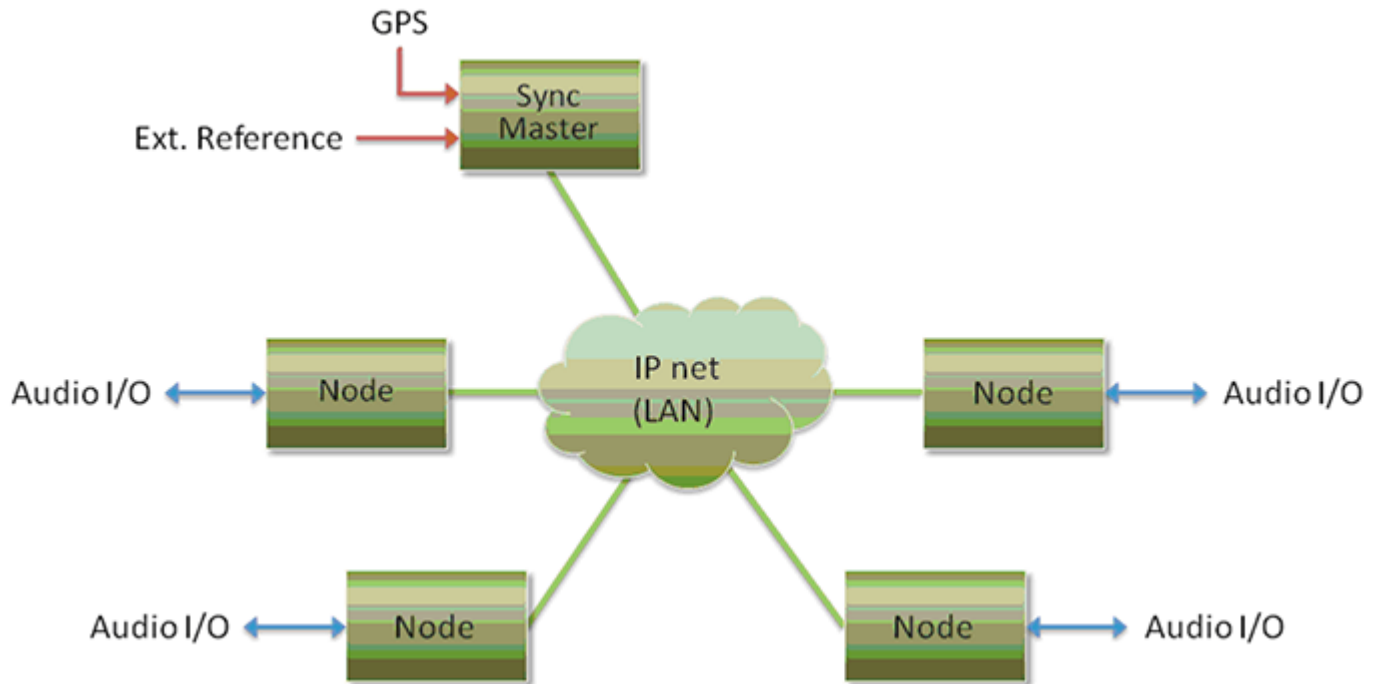

RAVENNA Network Basic Components Example

A RAVENNA system requires a carefully configured IP network, a master clock device and any number of RAVENNA enabled I/O nodes. The master clock can be either a dedicated device or any RAVENNA node capable of serving as a grandmaster. The preferred time domain reference is GPS. Simple streaming across a network can be achieved without any synchronization at all but in pro audio applications tight synchronization between all devices and streams is absolutely mandatory. While playback synchronization in most applications requires sample accuracy, one goal for RAVENNA is to provide superior performance by offering phase-accurate synchronization as an option thus rendering separate reference word clock distribution throughout a facility or venue redundant.

Flexibility

The system design approach allows for operation with or without centralized services for configuration / connection management. ALC NetworkX recommends that basic device configuration (e.g. initial settings and setup of audio streams) should be executed via a web interface (http). However other methods may be used in addition or as an alternative.

Device discovery is accomplished with DNS-SD (via an mDNS or DNS service). In small networks, without DHCP / DNS servers, the zeroconf mechanism - a fully automatic, self-configuring method - is used for auto-IP assignment and service advertisement & discovery.

Streams available on the network are represented by SDP records with extended information (i.e. a clock domain identifier, RTP time stamp association etc.) Clients can connect to streams via RTSP or SDP/http.

Resilience

As you would expect RAVENNA supports redundancy. Although modern network infrastructures can be configured to guarantee a high level of transport security and reliable 24/7 operation for added security there is the option of full network redundancy. Each RAVENNA device can include two independent network interfaces which can be connected to independent physical networks. By duplicating any outgoing stream to both network links, any destination device will receive the full stream data on both network interfaces independently. If data from one link is corrupted, or one network link fails completely, the uncorrupted data is still present on the other link. Changeover in the event of the failure of a network link is automatic.



Streaming

Unicast

Unicast (one-to-one) is used in application scenarios such as an individual stream between two devices (e.g. a multi-channel stream between a console and a recorder/DAW). This uses a point-to-point connection between the sender and receiver. Since each additional receiver adds its own individual connection network traffic increases with every additional unicast stream.

Multicast

Multicast (one-to-many) streaming is used in scenarios where a single source is to be distributed to many potential recipients (e.g. program stream to journalists' desktops). At the sending end this only requires one connection per stream. Network switches are aware which participants (receivers) should receive any particular multicast and forward packets only to registered nodes. In multicast set-ups the network traffic only increases on the last (closest to receiver node) segment(s) of the network path.

Infrastructure

The network infrastructure must be able to transport IP packets and must support a number of standard operating protocols, e.g. RTP/RTCP for streaming since this is used widely and supports a wide variety of standard payload formats. Some of these formats are mandatory for all RAVENNA devices, others are optional. For example this protocol offers the possibility of standard media player applications subscribing to RAVENNA streams. Synchronization across all nodes is achieved via the IEEE1588-2008 (PTPv2 Precision Time Protocol). This is another standard protocol which can be used on IP. PTPv2 provides a means for synchronizing local clocks to a precision as defined in AES-11. Accurate synchronization can even be achieved across WAN connections when GPS is used as a common time domain.

Quality of Service

For the QoS (Quality of Service) protocol DiffServ has been chosen since it is widely supported by most modern managed switches. Since other traffic can co-exist with RAVENNA on the same network, RAVENNA traffic must be on the fast track. RAVENNA packets are assigned a high priority classification to ensure expedited transport across the network, while other packets with lower priority are treated as best-effort traffic. Even within RAVENNA there are different priorities assigned to different classes of traffic. Synchronization is assigned the highest priority, immediately followed by any real-time media traffic, while control and configuration traffic will be on a lower priority level. Any non-RAVENNA traffic would receive the lowest (standard) priority and be treated as best-effort traffic. Performance and capacity scale with the capabilities of the underlying network architecture.

4 MT Discovery

Overview

MT Discovery is a standalone application that searches your network(s) for Bonjour Services. It enables quick and easy access to Merging Technologies Web Services based on Bonjour, such as the Horus configuration page. These pages will be open in your computer's default browser. MT Discovery can be used to update the Horus Firmware. Please refer to the Horus User Manual for detailed information about this procedure.

Note: The default web browser is determined by a computer setting, not from MT Discovery. It will most probably be one of the following applications:

- Microsoft Internet Explorer
- Apple Safari
- Mozilla Firefox
- Google Chrome.

Google Chrome or Apple Safari are recommended for use with Merging Technologies products.


Using MT Discovery

Launch MTDISCOVERY

Launch the MT Discovery application from the Windows Start Menu:

All Programs > Merging Technologies > MT Discovery

or by clicking on the desktop icon.

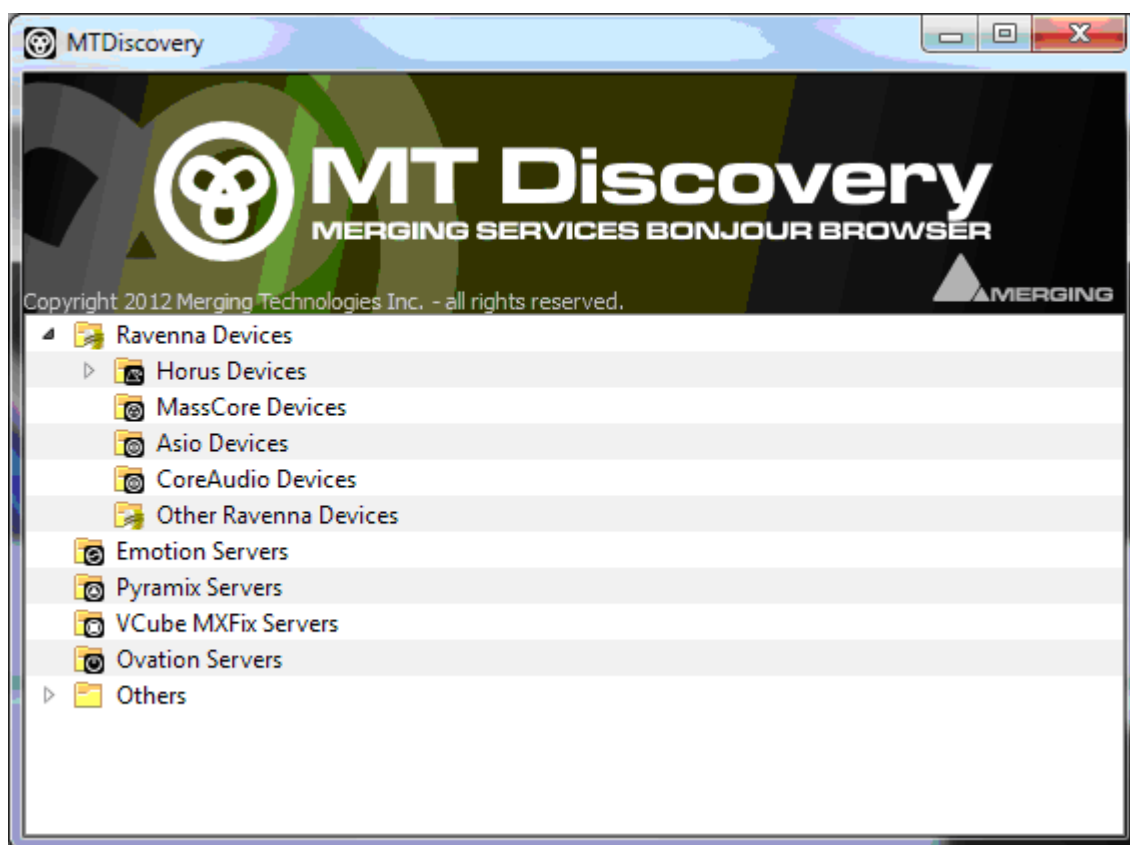

MT Discovery Window

The MT Discovery application window displays a tree view of all the devices it finds on the Bonjour Network. It refreshes automatically when a device is connected or disconnected.

Groups

MT Discovery will sort all devices into groups automatically (displayed like folders), depending on the characteristics of the devices.

The different groups are:

- **RAVENNA Devices**

This group contains devices which have the RAVENNA protocol enabled and sorts them into different subgroups:

- **Horus Devices**
- **MassCore Devices**
- **Asio/Core Audio Devices**
- **Other RAVENNA Devices.**
- **Emotion Servers**



- **Pyramix Servers**
- **VCube MXFix Servers**
- **Ovation Servers**
- **Others**

The **Others** group contains all Bonjour devices that could not be identified by MT Discovery. Printers are likely to be found in here.

Note: The number in brackets near a collapsed folder indicates how many devices this folder contains.

Actions

Right-clicking (Ctrl+click on Mac) on an item on the tree view displays a contextual menu, which lists the actions available for the item.


- | | |
|----------------------|---|
| Open | Open is what you will want to do most of the time. It will show the main page of the device in your computer's default web browser. This can also be achieved by double-clicking on a device, or by hitting Enter when the device is selected. |
| Open Advanced | Open Advanced will attempt to display the main settings page of the device in the computer's default web browser. This can also be achieved by holding down Ctrl (Cmd on Mac) and double-clicking on a device, or by hitting Ctrl + Enter (Cmd + Enter on Mac) when the device is selected. |

Note: Some devices will not support this, and your web browser will report a **404 - page not found** error. In this case, we recommend you access the main page with command **Open**, described above, then browse to the setup page in your web browser directly.

- | | |
|--------------------------|--|
| Expand / Collapse | Only available for Groups, shows/hides the contents of a folder in the tree view. This can also be achieved by clicking on the +/- sign on the left side, or by double-clicking on the Group name. |
|--------------------------|--|

Color Coding

The color of RAVENNA Device entries indicates the network they are on. Same color = same network.

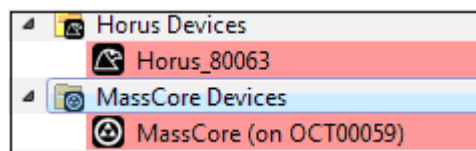

Device Network Color Coding

Note: Horus and MassCore entries must be the same color in order to work together in RAVENNA mode.

Additional Information

The MT Discovery application is located in the following folder:

- | | |
|-------------------|--|
| On Windows | C:\Program Files\Merging Technologies\MTDiscovery |
| On Mac | TBA |
| On Linux | TBA |

5 Merging RAVENNA Easy Connect

Overview

The **RAVENNA Easy Connect** utility is installed along Pyramix v8 and included in the ASIO and Core Audio Drivers package. This utility enables Horus users to connect the visible RAVENNA streams and route them accordingly to the desired I/Os.

Accessing Easy Connect

When Pyramix is launched with the VS3 Control Panel set to RAVENNA mode the RAVENNA Easy Connect utility is launched automatically and appears in the Windows system tray. Users who have installed the ASIO and Core Audio Drivers will also have the utility running in the respective tray.



Easy Connect Tray icon

Pyramix

The RAVENNA Easy Connect dialog is opened by:

View > Windows / Tools > RAVENNA Easy Connect

It can also be opened by clicking on the Pyramix toolbar icon:




Pyramix Toolbar icon

Once the dialog is open the connection tree is displayed.

Easy Connect will see all the RAVENNA connections which are activated in the Horus module pages (as RAVENNA).

Local Computer RAVENNA Host


The left-hand column of the Easy Connect window shows the connections used on your MassCore system, ASIO or Core Audio host.

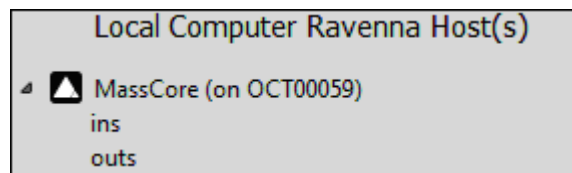

Easy Connect Local Ravenna Hosts


Network Accessible RAVENNA Device

The top right-hand entry in the Easy Connect window shows the available Horus units.

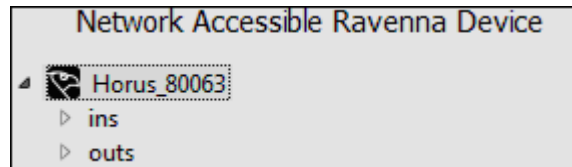

Easy Connect Network RAVENNA


Expanding the Horus entry displays the **ins** (inputs) and **outs** (Outputs) available. These can be connected or disconnected (from drop down menu). If a Module Output Source is not set to RAVENNA it will not appear in the Easy-Connect Inputs and Outputs list.

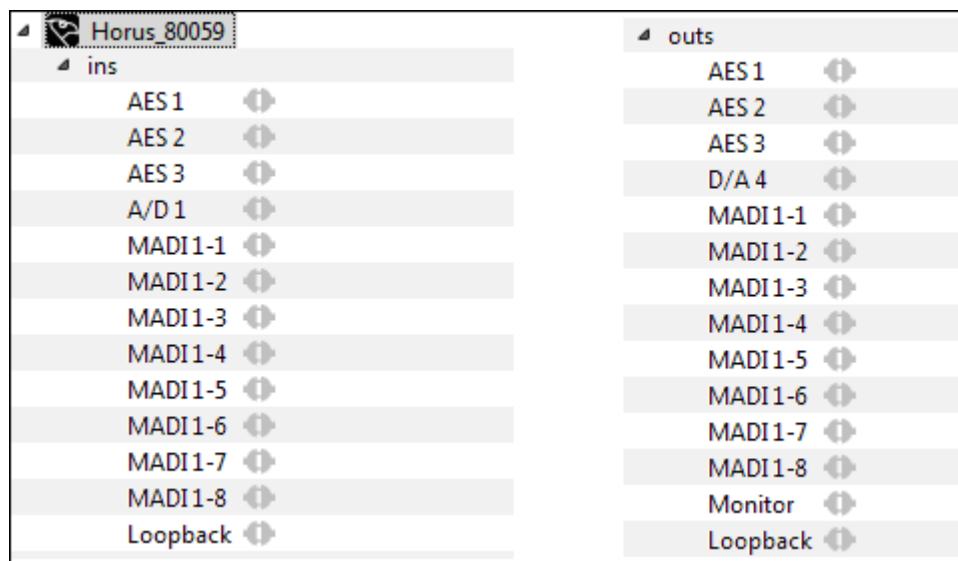

Easy Connect ins and outs


Making a connection

 Click on the module to be connected. It will be highlighted once clicked.



Easy Connect Selected I/O Module

Right-click to access the drop-down context menu. Here you can connect or disconnect the module I/O.

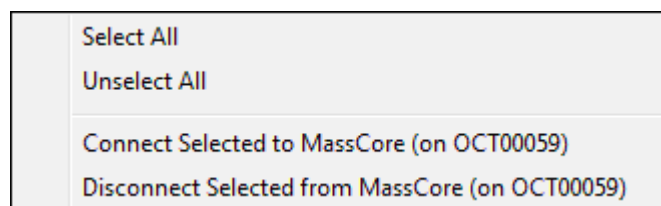

Easy Connect Context Menu

 
Alternatively use the buttons in the lower part of the Easy Connect window to perform the connection or disconnection



Easy Connect Connect & Disconnect buttons

Double-clicking on a RAVENNA module entry will Connect or Disconnect the module.

Once the module connection is made a Green icon will be displayed



Easy Connect Module Connection

Connection Status



Not connected



Connected correctly



Connection Error (see message displayed at bottom of Easy Connect window for details)



Partial connection

A **Partial connection** indicates that the connection to the MassCore, ASIO or Core Audio host cannot be made. Please verify that the MassCore, ASIO or Core Audio host is available in the left-hand Easy Connect column. If it is present select the problematic input or output and disconnect it, then reconnect it.

If the MassCore, ASIO or Core Audio host is not present please exit and restart the application.


Note: Each Input and Output module is in blocks of 8 channels (except for Monitoring which is 2 channels)

Once connected the Inputs or Outputs will be available within the Pyramix Mixer for I/O connections.

Activated Connection Example

Once a RAVENNA connection has been enabled it will be made available in the Pyramix Mixer.


In the example below the AD1 input has been enabled:

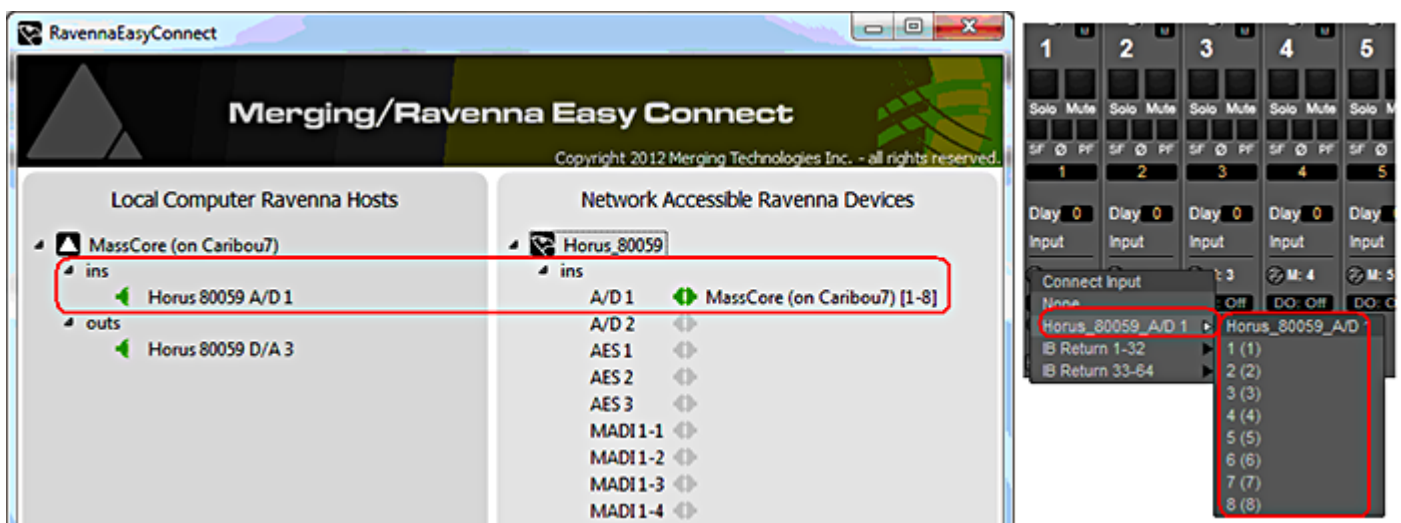

Easy Connect & Pyramix Connections

TimeCode Connections


Horus TimeCode RAVENNA connections can also be enabled from RAVENNA Easy Connect :

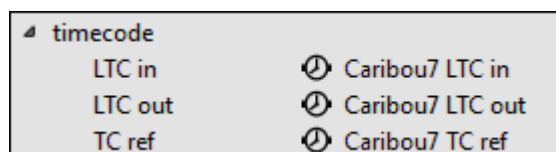


Easy Connect TimeCode Connections

Additional Details

 A warning red sign on the Horus logo along with a pop message will warn the user that the Horus and Pyramix project are not at the same sampling rate.



 Configuration error: Roll the mouse over the Horus red warning to display the exact error:



 Horus_80059 : sample rate mismatch


Easy Connect Sampling Rate Warning

Or look at the bottom of the dialog.

Note: Horus and Pyramix sampling rates **MUST** match in order to enable I/O connections through RAVENNA Easy Connect.


Clear All Connections

All current connections can be cleared by right-clicking on the RAVENNA Easy Connect icon in the Tray to access the context menu and selecting **Clear Connections**.

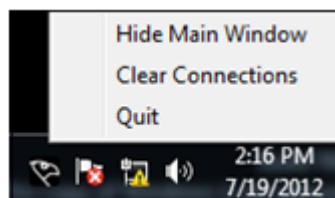

Easy Connect Tray Icon Context Menu

 You can also clear all connections using the button at the bottom of the Easy Connect Window:




Easy Connect Clear All COnnnections button

This will delete all the local RAVENNA connections made previously for all inputs and outputs. A confirmation pop-up window will appear. Click on **OK** to clear the connections or **Cancel** to abort.

Ctrl + Click on the **Clear All Connections** button will force a delete of **ALL** existing RAVENNA connections. Please be aware that this will clear connections that could be in use by other RAVENNA hosts. Ensure that you know what you are doing.

Lock to Pyramix Sampling Rate

 RAVENNA Easy Connect also includes an option to lock the Horus to the Pyramix sampling rate.



Easy Connect Sampling Rate Lock Check-

When active the MassCore system will always ensure that the Horus connected to it follows its sampling rate setting.

Note: When running with RAVENNA ASIO and Core Audio drivers the "Locked sampling rate" option is inactive, since Horus is the sampling rate master in such a configuration

Always on top

An option to display The RAVENNA Easy Connect window can be set to **Always On Top** in top from right-click context menu.



Easy Connect Always On Top message

Working with multiple Horus over a network

If you have multiple Horus's in your environment they must all be connected to a Merging certified switch. **Please see: Network Switch on page 30**

Each Horus will then appear in your RAVENNA Easy Connect utility where you will see the name of each Horus online. You will be able to make each Horus' I/O connections with the RAVENNA Easy Connect utility.

Troubleshooting

Sudden stoppage of RAVENNA Easy Connect

If the RAVENNA Easy Connect utility crashes or stops simply launch it again from the Windows Start menu under:

All Programs > Merging Technologies > RAVENNA Easy Connect > RAVENNAEasyConnect

6 TimeCode

TimeCode Setup

Horus/Hapi TimeCode Setup

TimeCode connections to Horus/Hapi are handled by Apple Bonjour.

Apple Bonjour MIDI Connection Discovery


This may be seen in:

Settings > All Settings > Hardware > MIDI Sync

rtp MIDI (Windows third party utility.)

MIDI Network Setup (Mac OSX)

Directory :

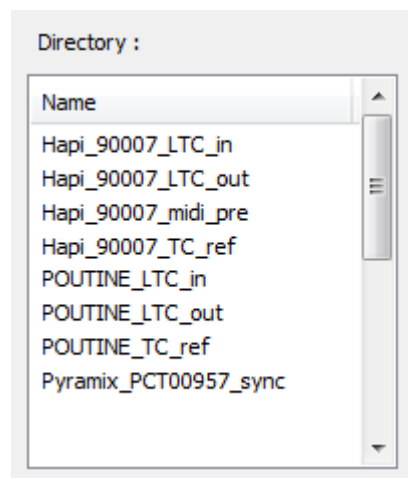

MIDI Sync Page - Directory section


The list shows a real-time view of all the Apple MIDI participants discovered on the network.

Naming/Nomenclature

Horus/Hapi_<SERIAL>_LTC_in	Physical LTC input (seen as MTC) used to receive Timecode to DAW
Horus/Hapi_<SERIAL>_LTC_out	Physical LTC output (seen as MTC) used to send out Timecode to Horus/Hapi
Horus/Hapi_<SERIAL>_midi_pre	Used to remotely access the Horus/Hapi MicPre
Horus/Hapi_<SERIAL>_TC_ref	Internal connection used to synchronize to a Video ref source
<Computer Name>_LTC_in	MassCore virtual LTC input
<Computer Name>_LTC_out	MassCore virtual LTC output
<Computer Name>_LTC_ref	Internal connection used to synchronize to a Video ref source
Pyramix_<Computer Name>_sync	Pyramix shows a MIDI in/out connection for transferring MTC

Horus/Hapi LTC IN-OUT for Pyramix Native users


- Ensure that the Project Frame Rate is set to match the incoming TimeCode.
- Open **Settings > All Settings > Hardware > MIDI Sync**

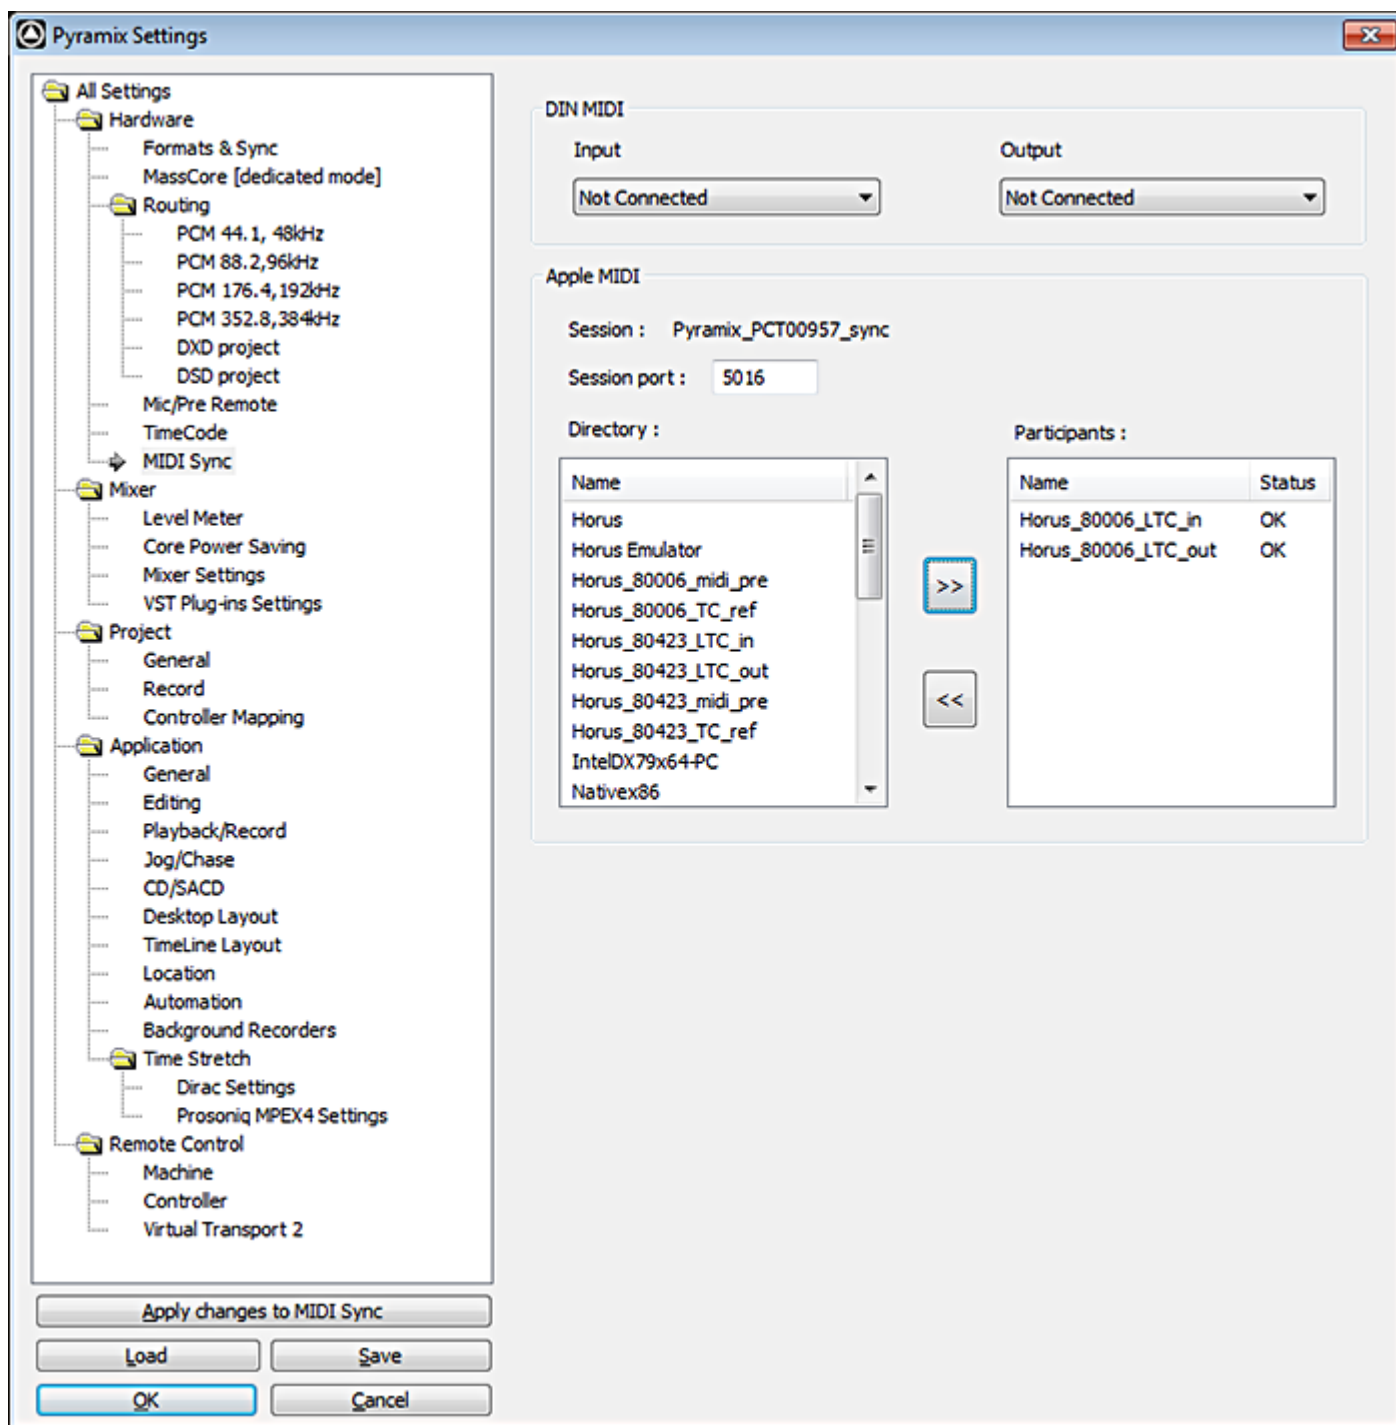

All Settings > Hardware > MIDI Sync

- Add the **Horus/Hapi LTC IN** and **Horus/Hapi LTC Out** entries to the **Participants :** list.
- Click on **OK** to save the settings and close the window.
- Open the Pyramix **Transport** window. [**Alt + T**].
- Set the **Pyramix** to **Chase** the **MTC Reader**.


- Pyramix will Generate MTC once a MIDI connection is on the **Participants** : list.

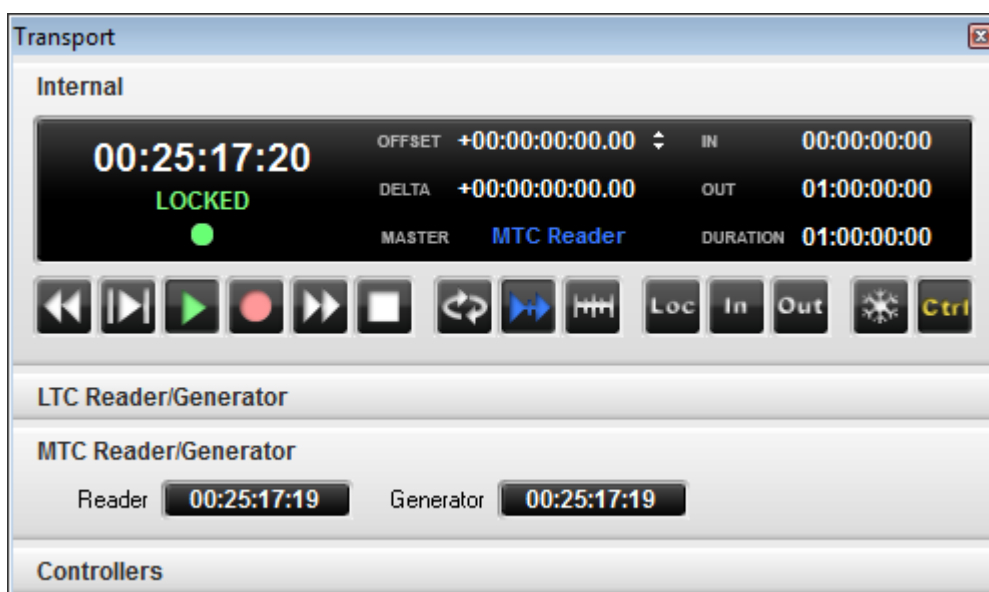

Transport window

Horus/Hapi LTC IN-OUT for MassCore users

MassCore users please refer to the **RAVENNA Network Guide**, use the **Easy Connect** TimeCode connections and set the Pyramix Transport to **LTC Reader** chase mode.

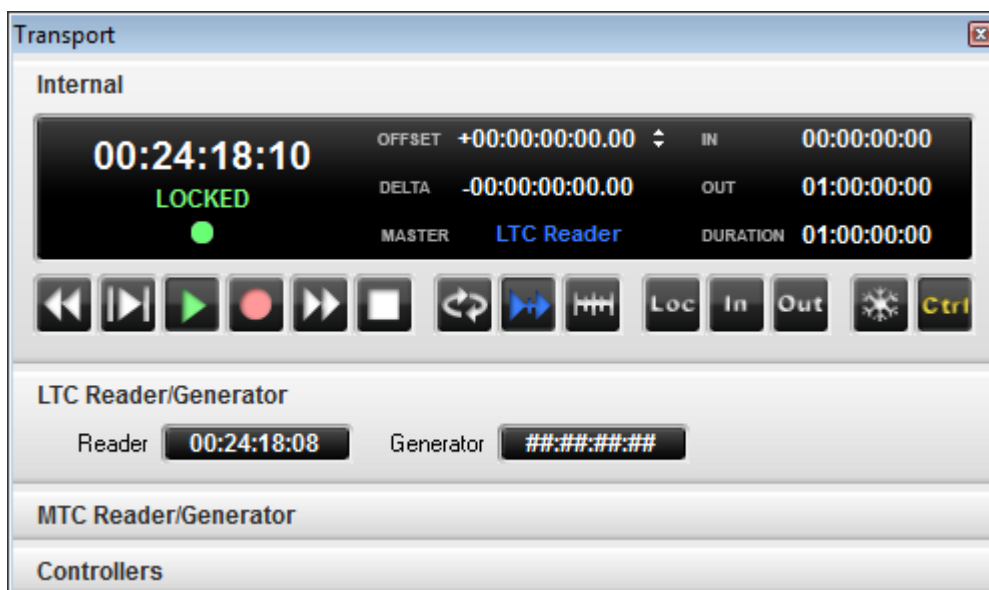

Transport window


Note: We recommend **NOT** using the **Settings > All Settings > MIDI Sync : Participant** entries.

Third Party DAW on Windows

First download and install **RTP MIDI** :

http://www.tobias-erichsen.de/wp-content/uploads/2012/08/rtpMIDI_1_0_11_227.zip

- Ensure the Horus/Hapi is connected to your computer. (I.e.visible in MT Discovery.)

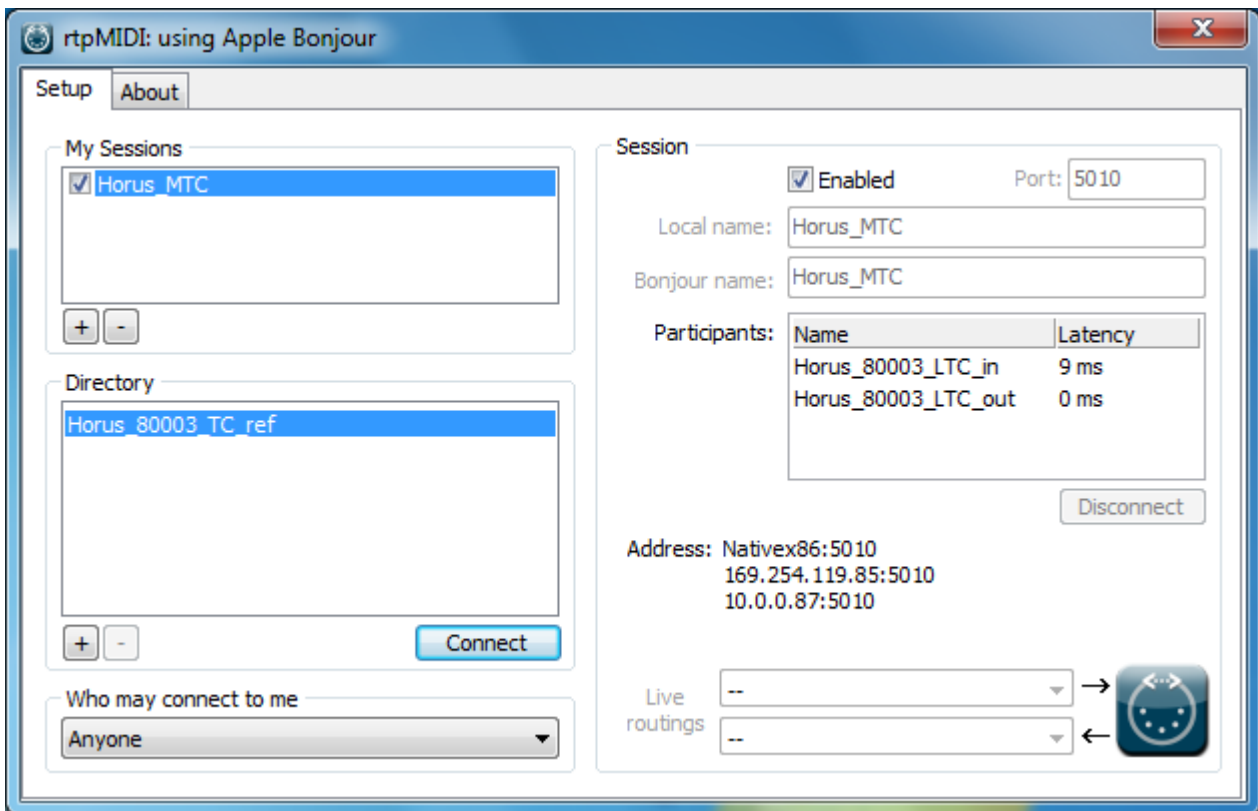

rtpMIDI:using Apple Bonjour Setup tab

- In the **rtpMIDI**, **Setup** tab click on the + icon in the **My Sessions** section to create a new MIDI port.
- For ease of use, change its Local name and Bonjour name to **Horus/Hapi_MTC**.

The **Directory** section shows the available streams.


- Select the **Horus/Hapi_SerialNumber_LTC_in** and click on Connect to add it to the Participants list.
- Select **Horus/Hapi_SerialNumber_LTC_out** and also add it to the Participants list.
- Enable the **Session** by checking the **Enabled** box to make the **Horus/Hapi MTC** available.

Note: Once configured correctly, it is not necessary to launch **rtpMIDI**, it will run as a service automatically at Windows start up.

Note: Any changes in **rtpMIDI** configuration may require a restart of the audio application.

Third Party DAW on Mac OSX

- Launch **MIDI Network Setup**

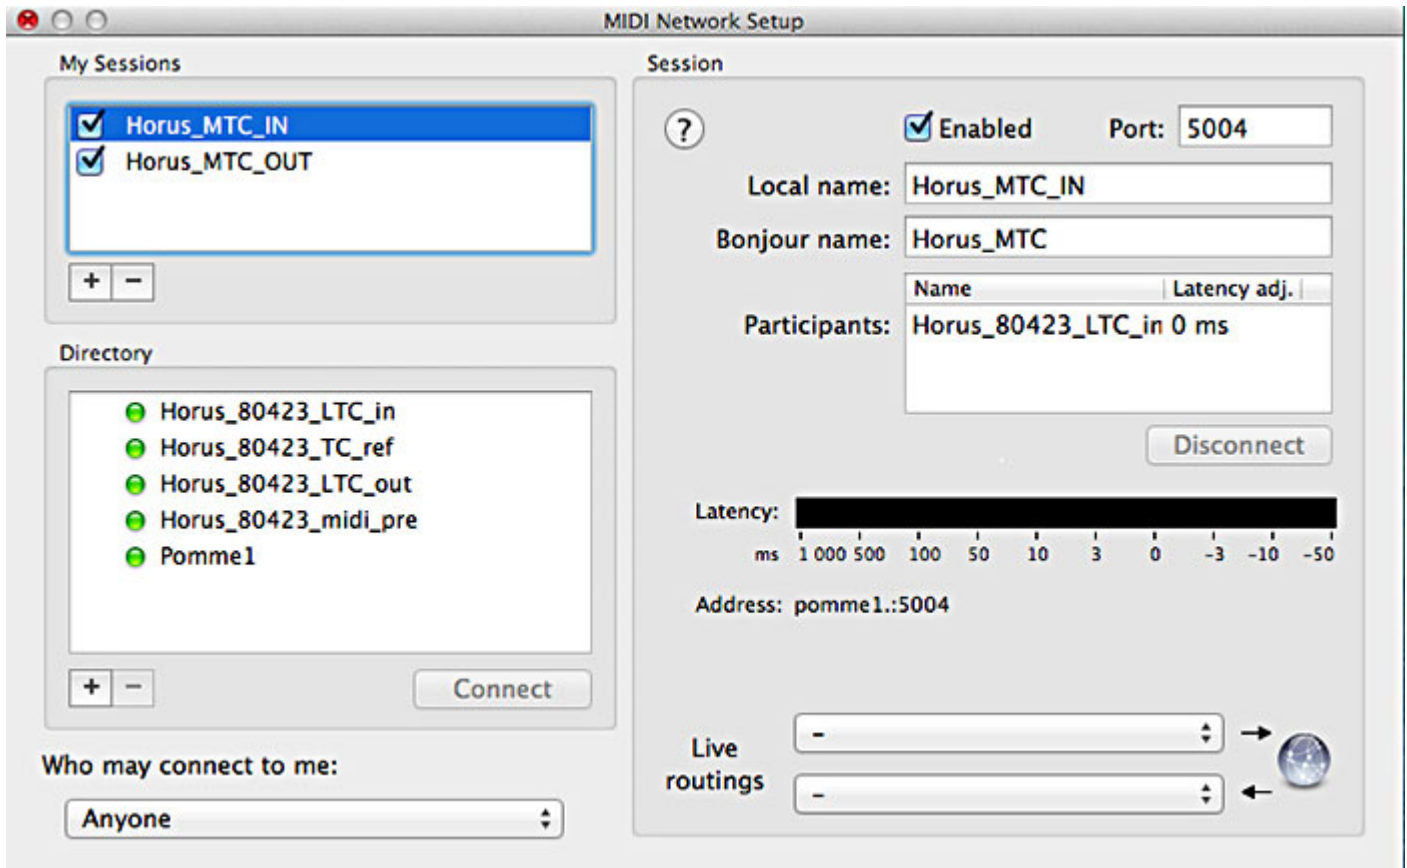

OSX MIDI Network Setup

- In **MIDI Network Setup** click on the + icon under My Sessions section to create a new MIDI port.
- For ease of use, change its *Local name* and *Bonjour name* to **Horus/Hapi_MTC**.

The **Directory** section shows the available streams:


- Select the **Horus/Hapi_SerialNumber_LTC_in** and click on **Connect** to add it to the **Participants** list.
- Now select **Horus_SerialNumber_LTC_out** and also add it to the **Participants** list.
- Enable the **Session** by checking the **Enabled** box to make the **Horus/Hapi MTC** available.

Important! After a system restart you will need to reconnect the Participants.

Setup Examples

Pro Tools on Mac Example

- Ensure that the **Project Frame Rate** is set to match the incoming TimeCode in the **Session Setup** window.
- Open the ProTools **Peripherals** dialog:

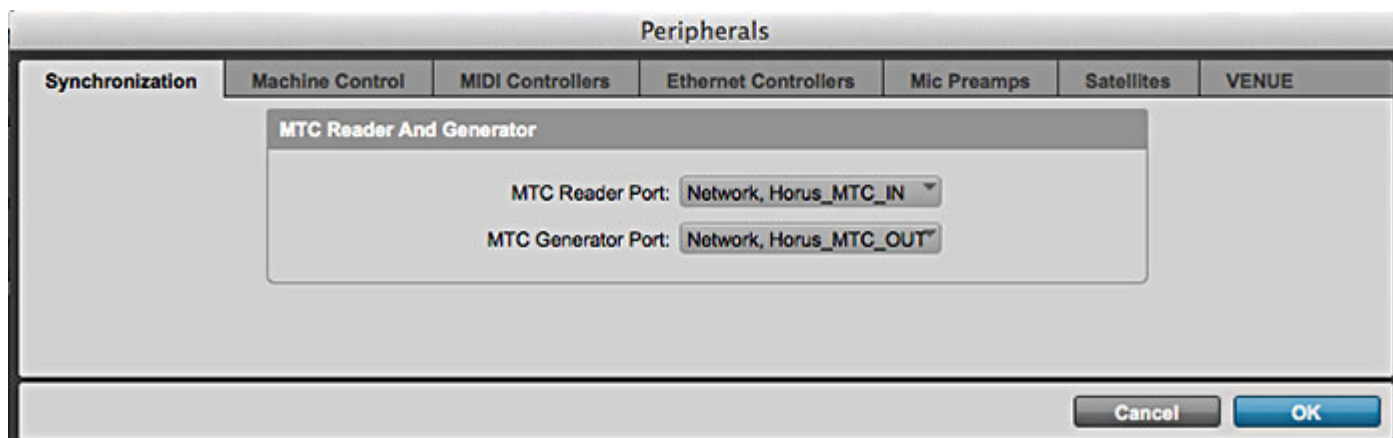

Pro Tools Peripherals dialog

- Set MTC Reader Port to Horus_MTC and MTC Generator Port to Horus/Hapi_MTC if you require Pro Tools TimeCode on the Horus/Hapi LTC output.
- Ensure the Session is set up correctly:



Pro Tools Session Setup

- In the Transport window, activate the **Chase** Icon (and / or **GEN MTC** button if you require Pro Tools Time-Code on the Horus/Hapi LTC output).

Open the **Session Setup** dialog:



-
- The screenshot shows a 'Peripherals' dialog box with a tabbed interface. The 'Synchronization' tab is active, displaying the 'MTC Reader And Generator' section. Within this section, there are two dropdown menus: 'MTC Reader Port' and 'MTC Generator Port', both of which are currently set to 'Horus_MTC'. To the right of the 'Synchronization' tab, the 'VENUE' tab is also visible. At the bottom right of the dialog, there are 'Cancel' and 'OK' buttons. The 'OK' button is highlighted with a blue border.

Pro Tools Peripherals : Synchronization tab

-


Pro Tools Transport window

- And in the **Transport** window, activate the **Chase** Icon (and / or **GEN MTC** button).

Nuendo 5 Example

First ensure that the Project Frame Rate is set to match the incoming Timecode.


- Open the **Device Setup** dialog **Devices > Device Setup**:

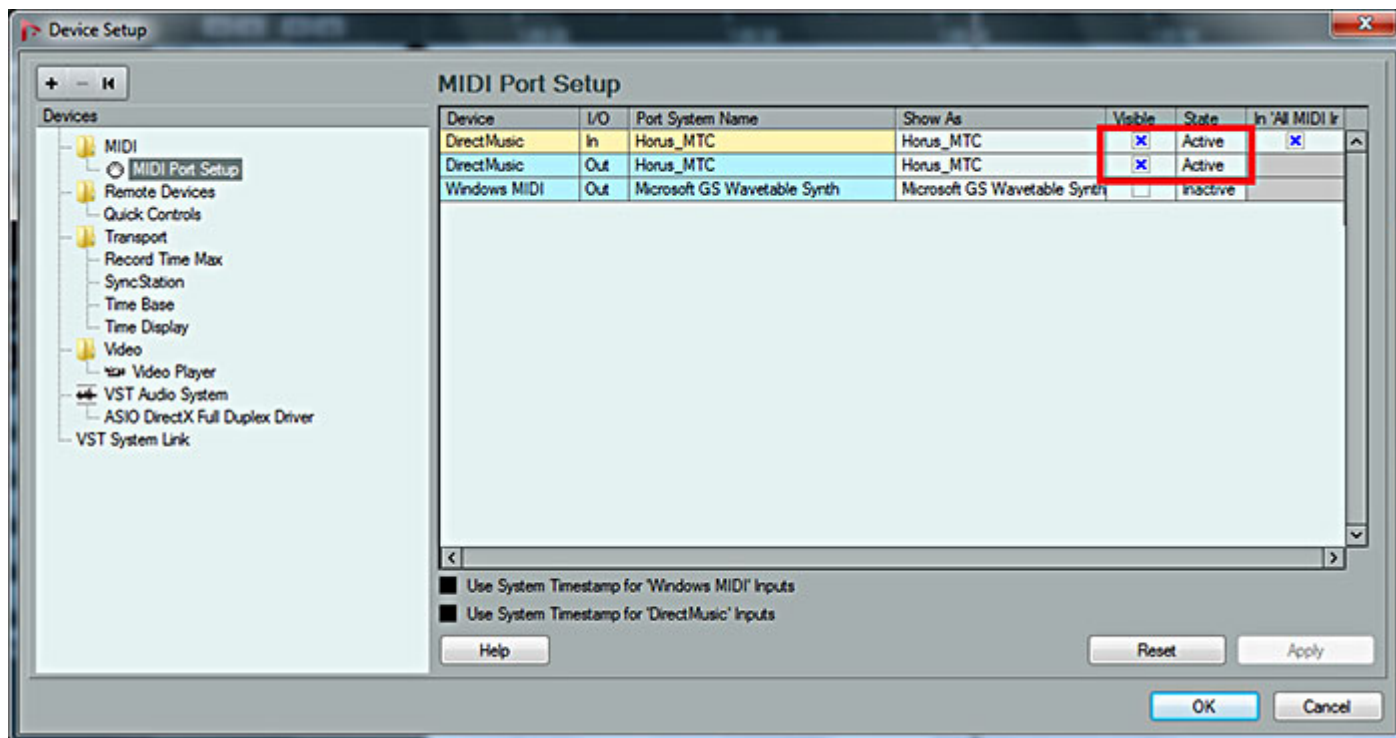

Nuendo 5 Device Setup : MIDI Port Setup

- Activate the **Horus/Hapi_MTC** as MIDI **In** and MIDI **Out**.

- Open Transport > Project Synchronization Setup:

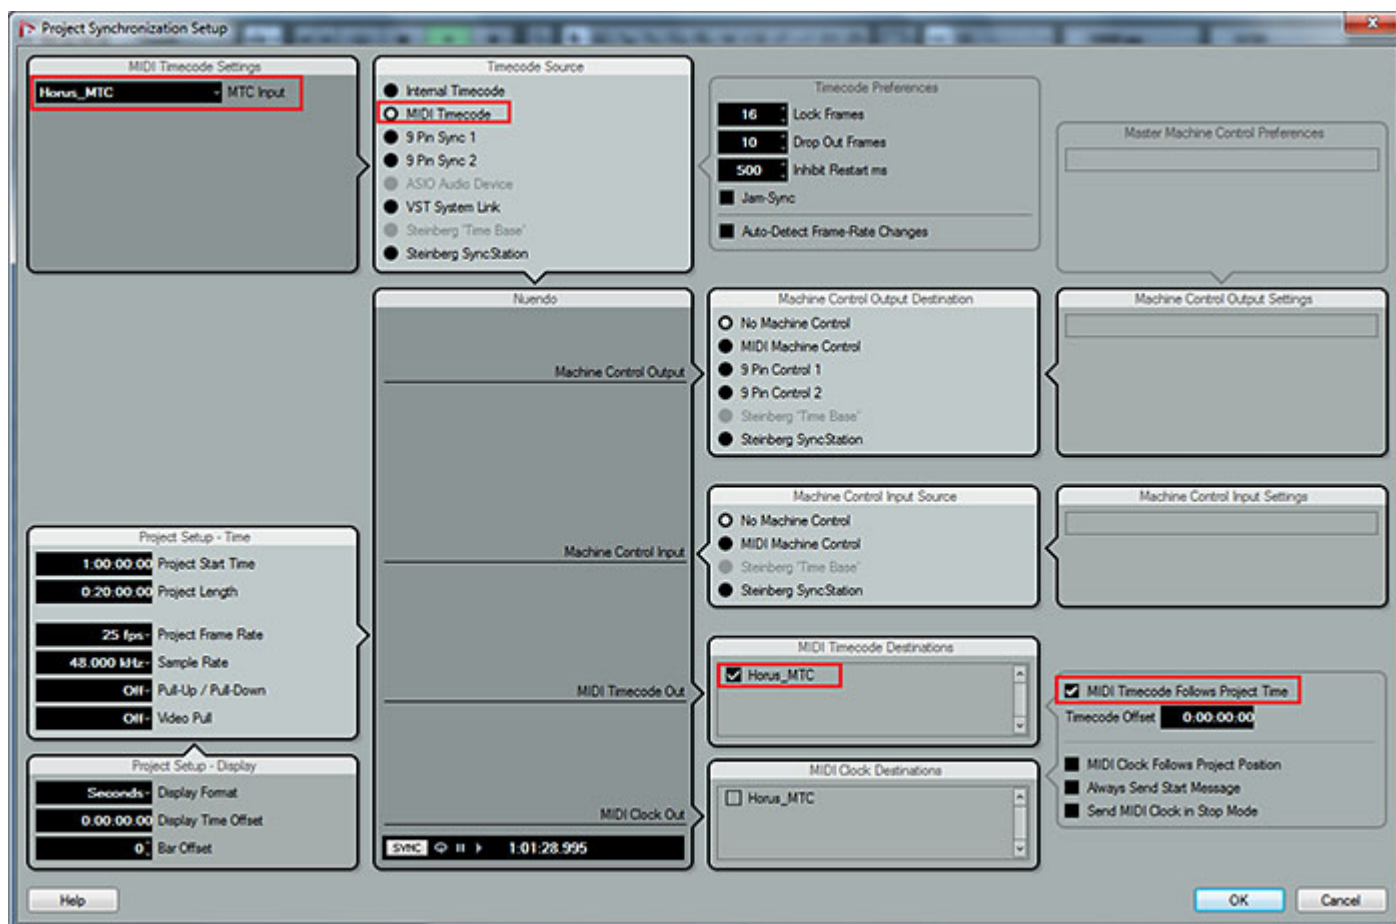


Nuendo 5 Project Synchronization Setup

- **Set MIDI Timecode** under **Timecode Source** and select **Horus/Hapi_MTC** under **MIDI Timecode Settings**.
- If Nuendo TimeCode is required on the Horus/Hapi LTC output, activate **Horus/Hapi_MTC** under **MIDI Timecode Destinations**, and check **MIDI Timecode Follows Project Time**.


Reaper Example

- Ensure that the Project Frame Rate is set to match the incoming Timecode in the **Project Settings** page.
- Open **Preferences > Audio > MIDI Devices**

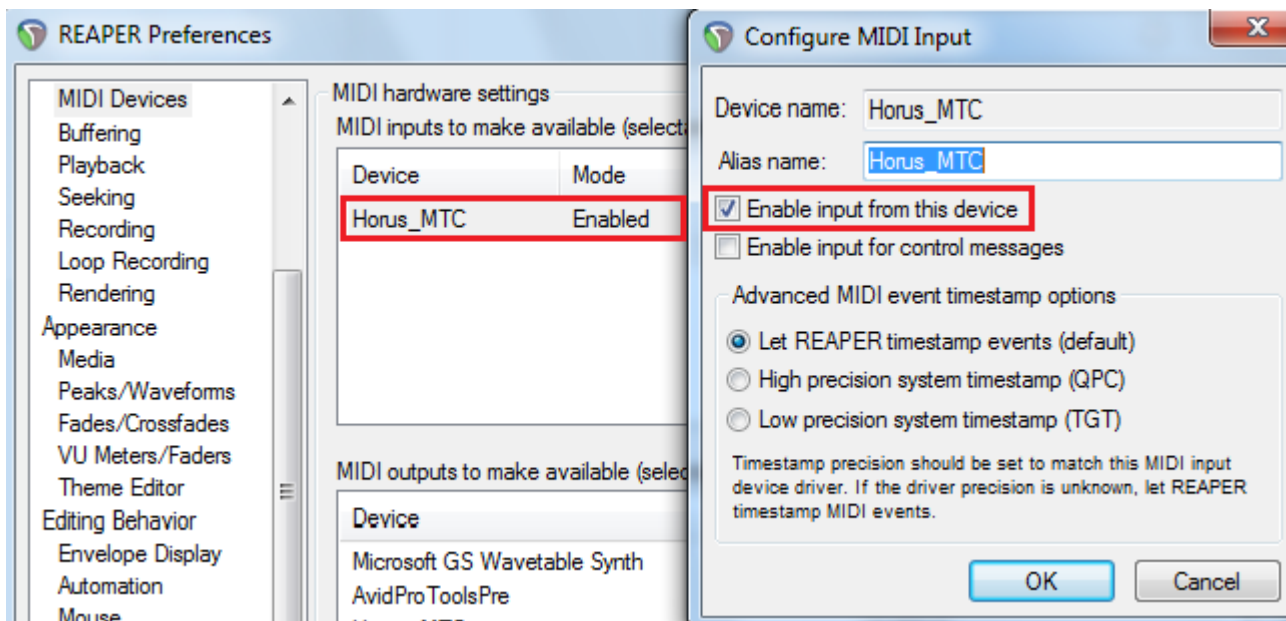

Reaper Preferences

- Enable **Horus/Hapi_MTC** in the **MIDI inputs to make available...** section, and check the **Enable input from this device** box in the **Configure MIDI Input** window.
- Right-click on the **Transport** window and select **External Timecode Synchronization > Synchronization settings**.

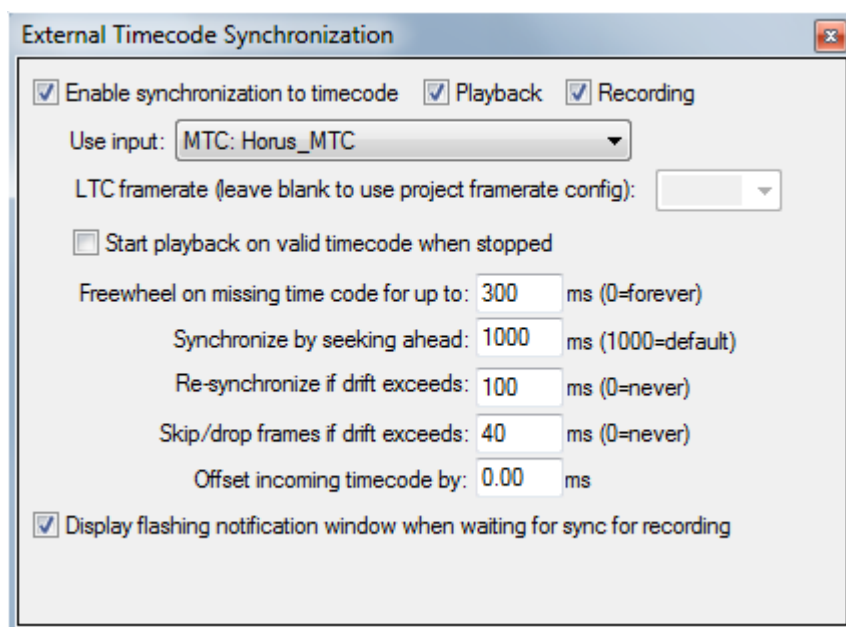


Reaper External Timecode Synchronization settings

- In the **Use Input** field select **MTC: MTC_Horus/Hapi**.
- The **Enable Synchronization to Timecode** check box or **[ALT + Right-click]** on the **Play** button toggles external synchronization.


Magix Example

- Ensure that the Project Frame Rate is set to match the incoming Timecode in the **Project Settings** page.
- Open **System Options > MIDI**

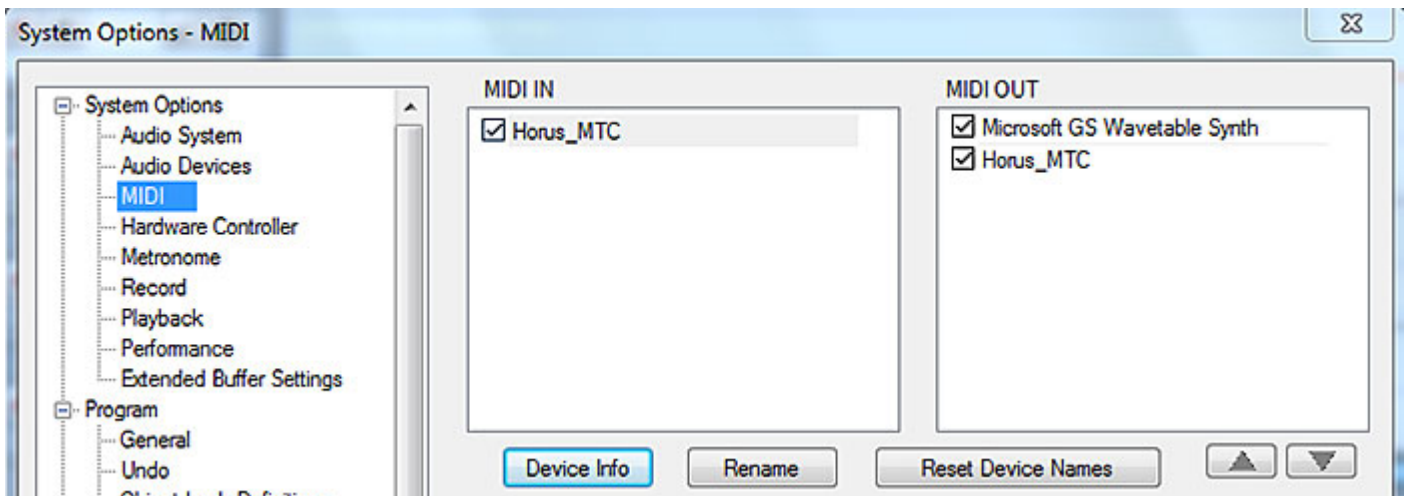

Magix System Options - MIDI

- Enable **Horus/Hapi_MTC** in the **MIDI IN** and **MIDI OUT** sections.
- Click on the **Sync** button in the Transport window to open the **Project Synchronization** window:

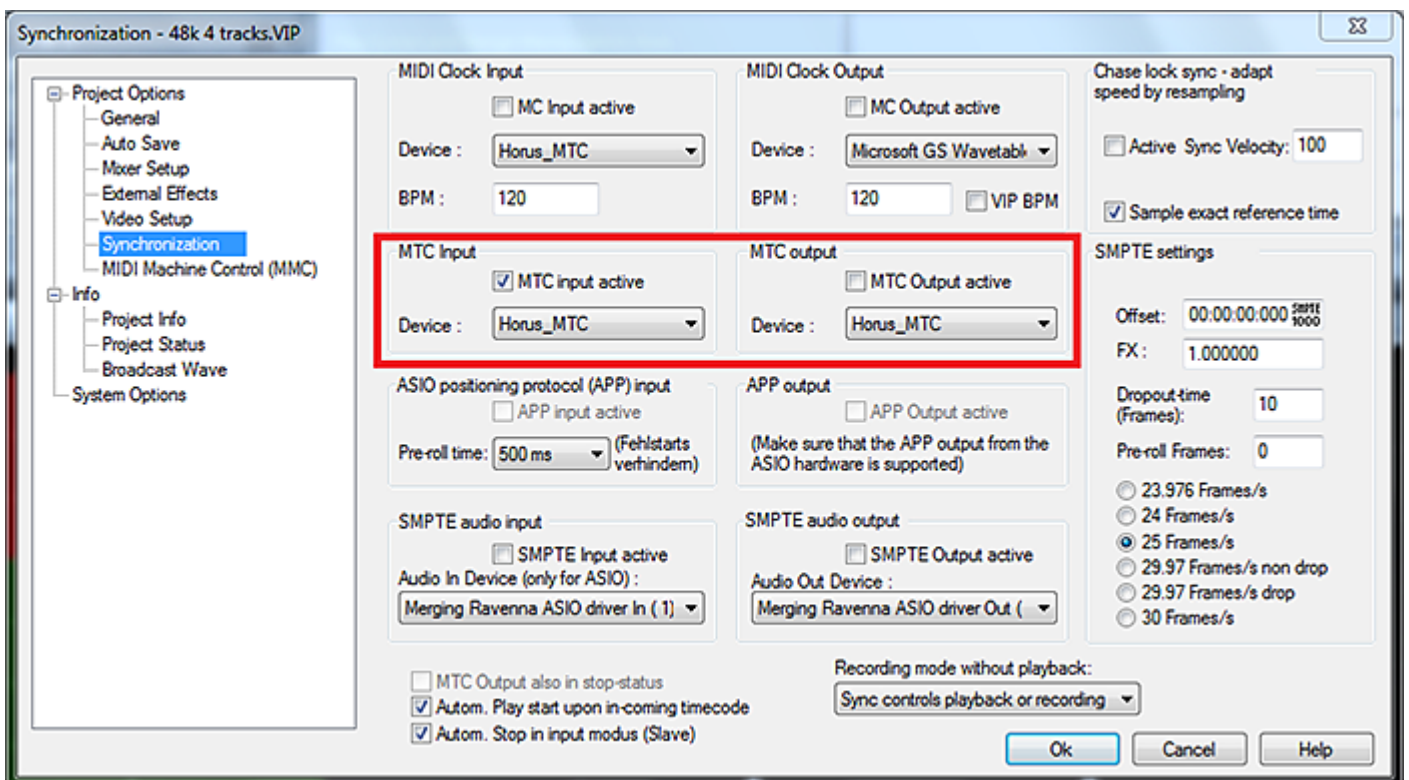

Magix Synchronization settings

- In the **MTC Input** and **MTC Output** sections, select **Horus/Hapi_MTC** as the **Device**, and activate **MTC input active** or **MTC Output active**.

7 Network Switch

Certified switch

At this time the only network switch certified by Merging Technologies for use with Horus - RAVENNA is the **Dell PowerConnect 2816** and others from the same series e.g. **Dell PowerConnect 2808, 2824, 2848...**



Dell PowerConnect 2816 Network Switch

Before Starting

Important! If you have problems accessing the switch for configuration when connected to the Merging MassCore PCIe Ethernet card (NET-MSC-GBEX1) please connect it to the PC's on-board Ethernet port. When configuration is completed reconnect the switch to the MassCore Ethernet card.

Important! Please avoid changing a network address or disconnecting Ethernet ports on your system when MassCore RAVENNA is running. It is possible that this will cause your Horus connection to reset and result in gaps in your recording.


Dell Power Connect 2816 Switch Auto-configuration Procedure

Note: For Dell Switches other than the **2816** and **2808** please use the manual configuration procedure: **Please see: Dell Power Connect Manual Switch Configuration on page 41**

1. Right click on the Network icon in the Windows Task Bar:




2. Select: **Open Network and Sharing Center**
3. Click on: **Change Adapter Settings** on the left of the pane.

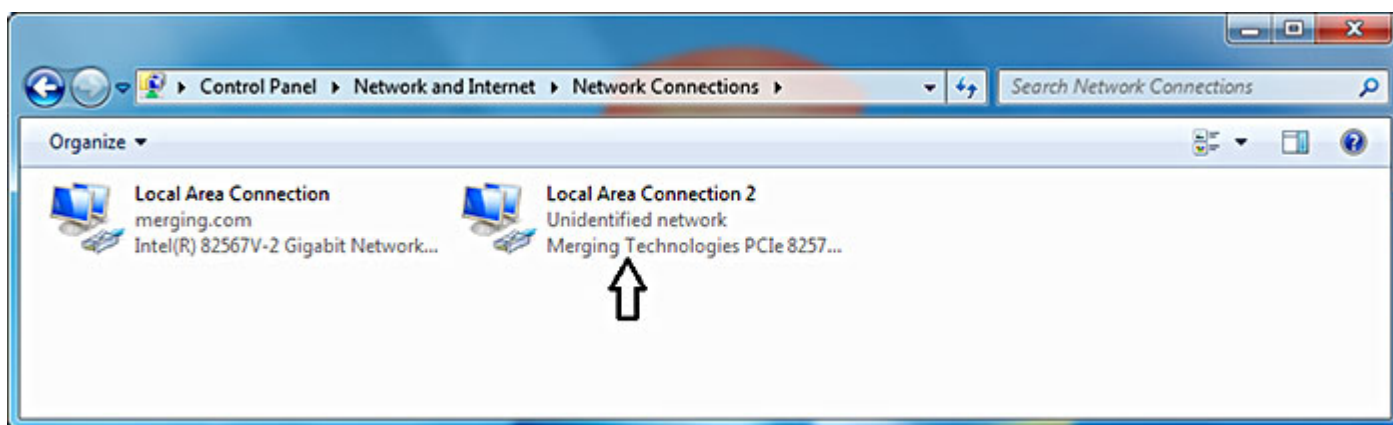


Control panel > network and Internet > Network Connection

4. Right-click the **Merging Technologies PCIe 8257** RAVENNA Network Card and select **Properties**:

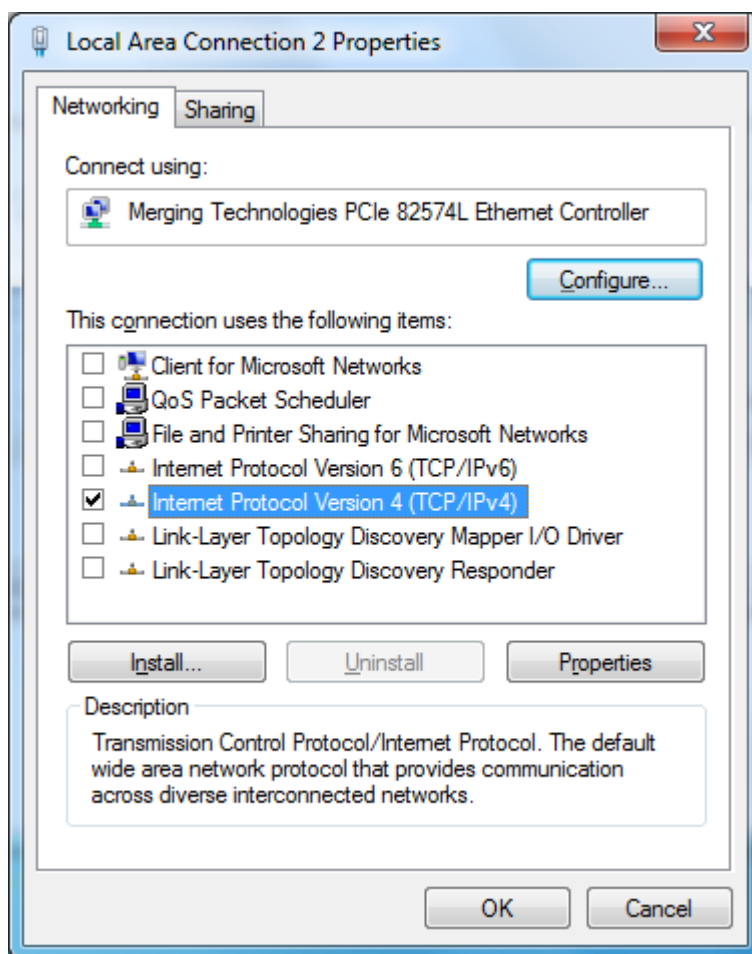

Local Area Connection Properties

5. Select **Internet Protocol Version 4 (TCP/IP)** and Click on **Properties**:

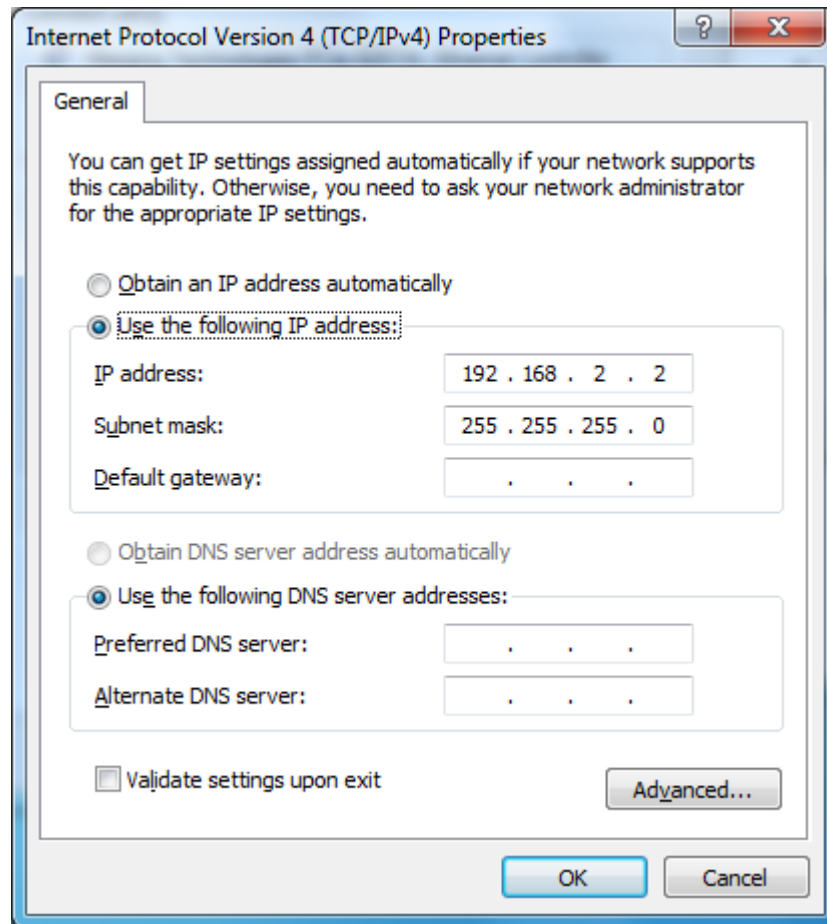

Internet Protocol Version 4 (TCP/IPv4) Properties

6. Click on the **Use the following IP address:** radio button and enter **192.168.2.2** (the DELL PowerConnect 28xx switch has a factory default IP address of **192.168.2.1**). Click on the **OK** button to accept the settings and close the dialog.
7. Before connecting to the switch it must be put into **Managed Mode** since the factory default is non-managed mode. To change the switch to Managed Mode, use a paper clip to press the Managed Mode button through the small hole as indicated by the arrow in the image below:



Dell PowerConnect 2816 Gigabit Managed Switch

8. Open a browser and type **192.168.2.1** in the address bar, username: "**admin**" password: "**admin**", Click on the **OK** button to log in:

Log In

192.168.2.1/config/authentication_page.htm

Dell OpenManage Switch Administrator

DELL

PowerConnect 2816

192.168.2.1

Log In

If a screen does not appear, please refresh.

Type in Username and Password, then click OK

Username admin

Password


OK

Dell OpenManage Switch Administrator Log In Screen

The **Restore Saved Configuration** page will open:

Dell OpenManage Switch Administrator Restore Saved Configuration Screen

9. Click on the **Apply Changes** button. The device will reset" message will appear. Click on the **OK** button and wait for around 2 minutes:

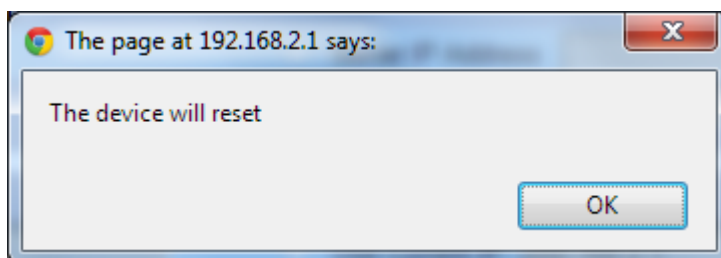

Message Box

10. Log in again (**username: admin, password: admin**) as in step 9. above.

Dell OpenManage Switch Administrator Log In Screen


11. Download the latest Dell Switch Configuration file named **MT RAVENNA DPC2816_startup-config_1.x.ber** available here:

<http://www.merging.com/products/horus/downloads>

The Merging RAVENNA configuration file will auto-configures various settings /protocols to optimize the RAVENNA network, and also sets the definitive fixed IP address of the switch: **169.254.252.1**).

Note: A Dell Switch Configuration file is also available for the Dell Power Connect 2808 switch.


12. After login choose **System > File Management > File Download**

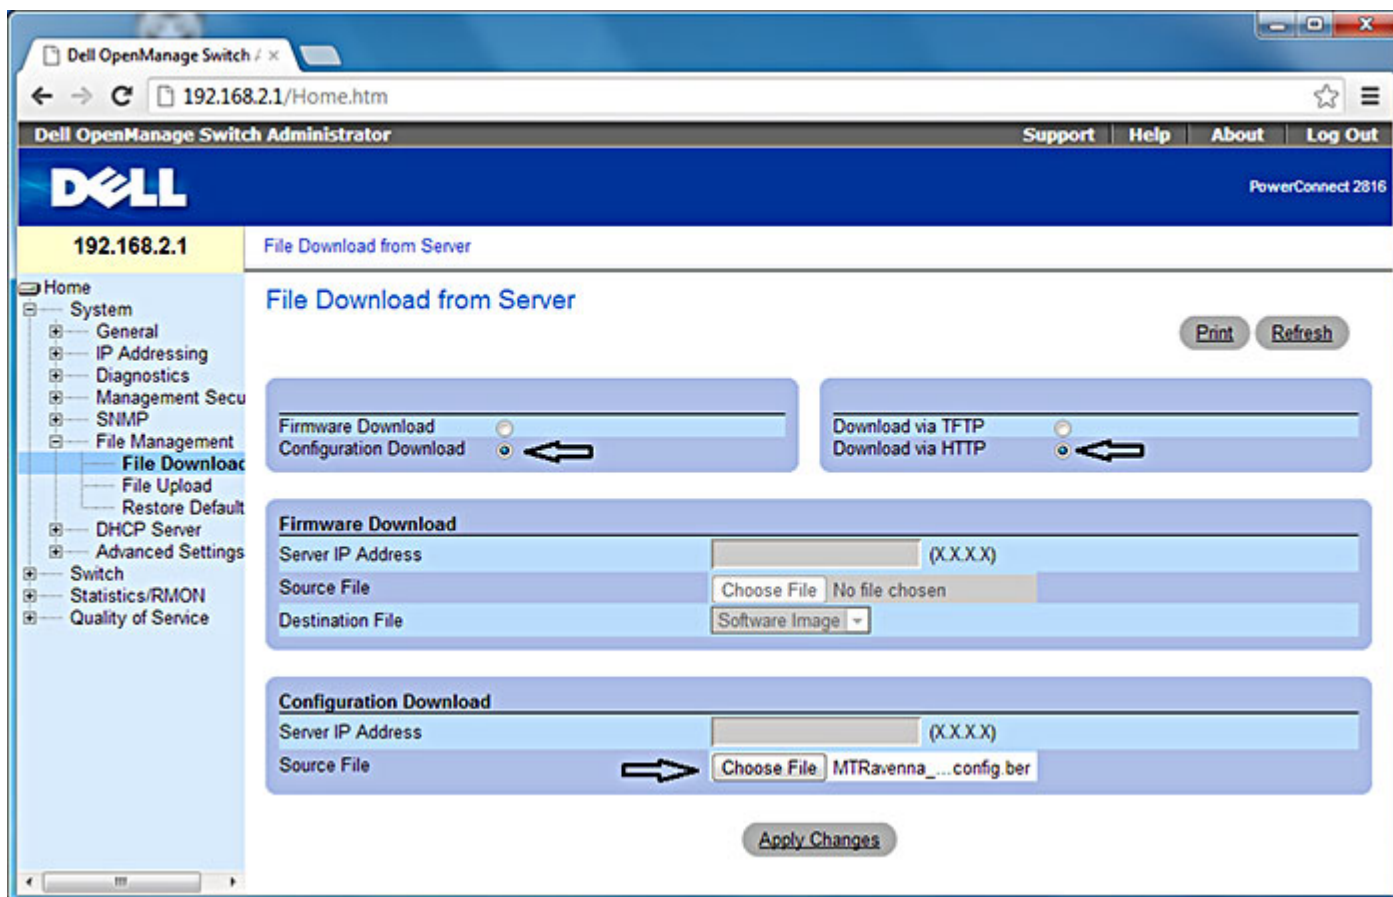

Dell OpenManage Switch Administrator File Download page


13. Select the **Configuration Download** and **Download via HTTP** radio buttons. (Arrowed in the screenshot above.) Click **Choose File** and browse to the **MTRAVENNA_DPC2816_startup-config_1.x.ber** file. Then click **Apply Changes**.

Note: For the Dell Power Connect model 2808 switch please use the appropriate file.

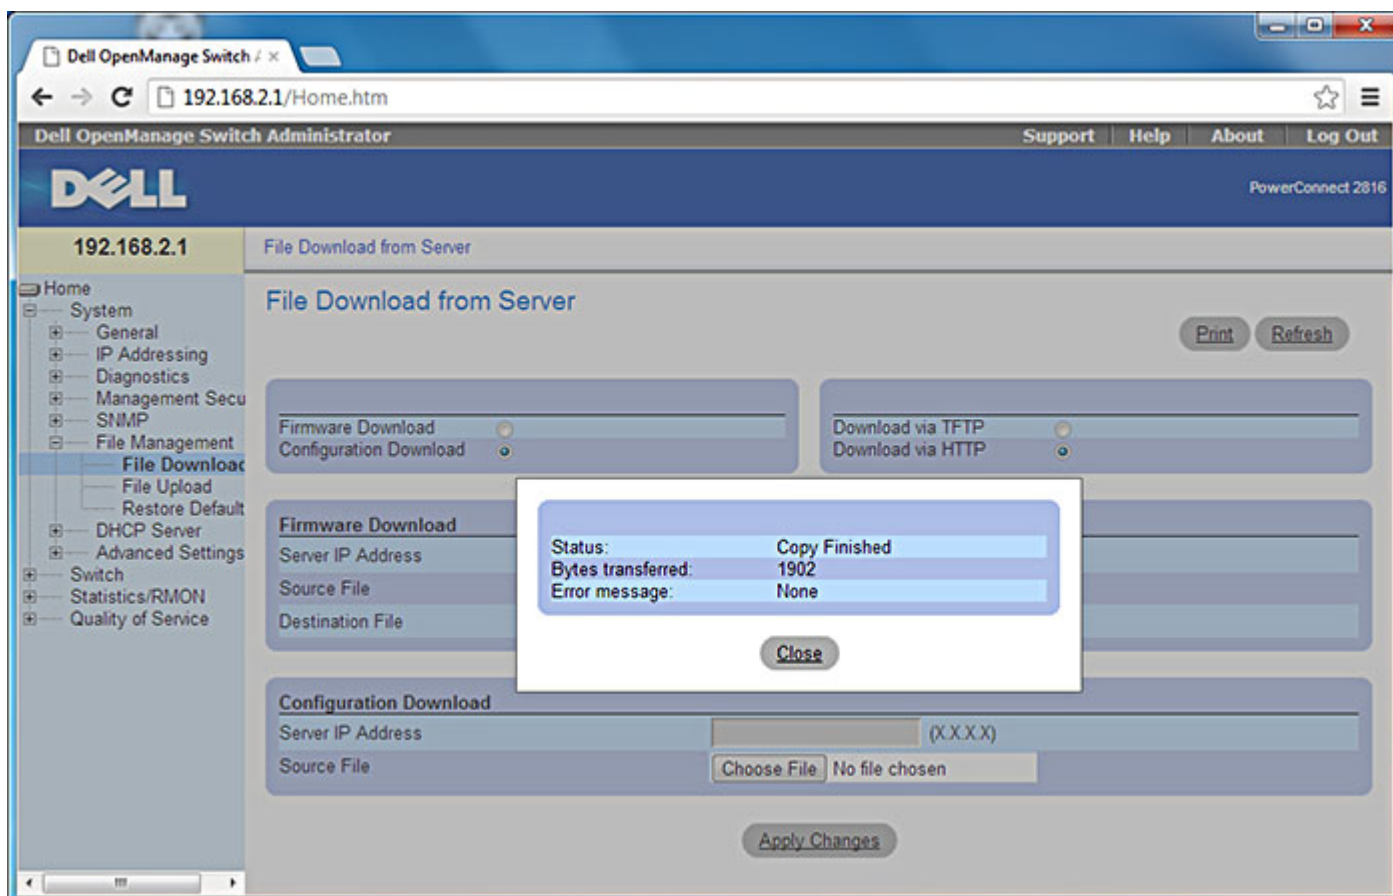

Dell OpenManage Switch Administrator File Copy message


14. When the download completes, **Copy Finished**, click **Close**. The message box below will open:

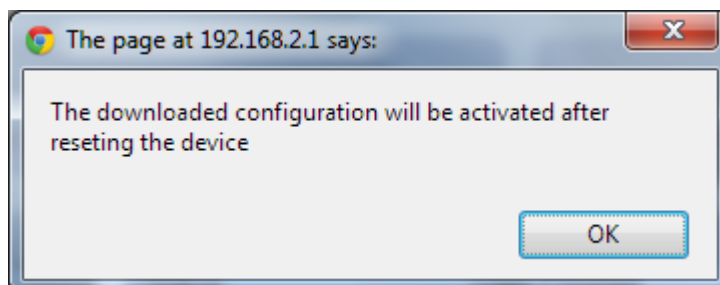

Message Box

15. The downloaded configuration will be activated after resetting the device Click **OK**


16. Log out, power OFF and restart the switch.

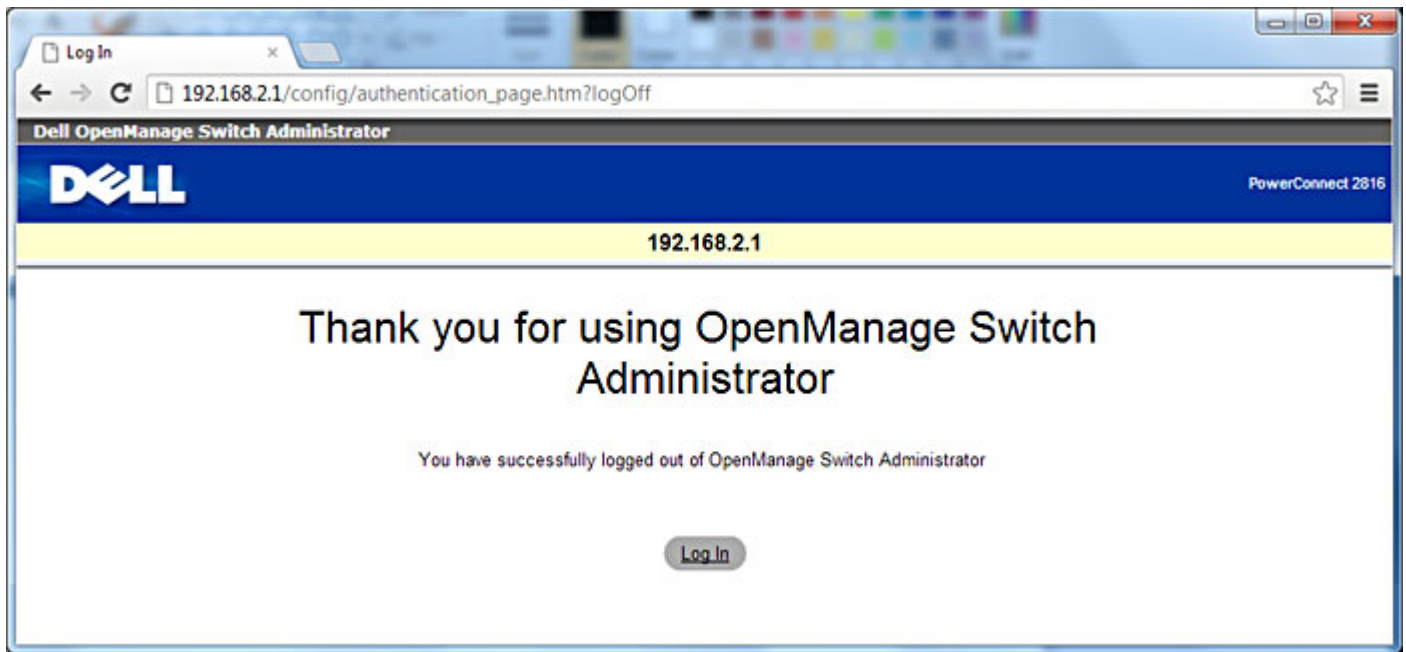

Dell OpenManage Switch Administrator Log Out message

Next operation is to restore the Merging RAVENNA Network Card's IP configuration back to automatic. (Auto configured IP addresses are in the range 169.254.x.x, range on which the switch is now configured.)

17. In the **Network Connections** window (see steps 4. 5. and 6. above), right-click the **Merging Technologies PCIe 8257 RAVENNA Network Card** and select **Properties** select the **Obtain an IP address automatically** radio button and also select **Obtain DNS server address automatically**, click on **OK**.

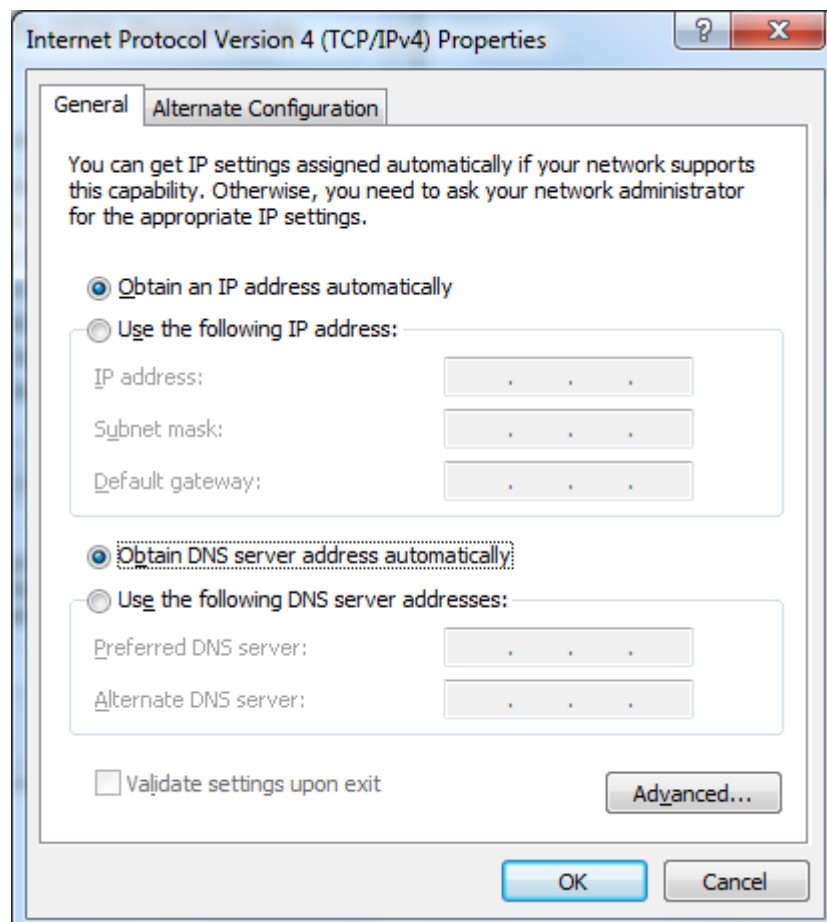

Internet Protocol Version 4 (TCP/IPv4) Properties

18. The switch is now configured and ready to use, and the Merging RAVENNA Network Card should have auto-configured itself with an IP in the **169.254.x.x** range. You can verify this by opening a browser and typing **169.254.252.1** in the address bar, Log in (**username: admin password: admin**).

Dell OpenManage Switch Administrator Log In Screen

19. The switch is ready and accessible at **169.254.252.1**

Dell OpenManage Switch Administrator Home Screen


Dell Power Connect Manual Switch Configuration

First, connect the switch to the RJ45 port on the MassCore PCIe Ethernet card (NET-MSC-GBEX1).

Configure Network Addressing

The **Dell PowerConnect 2816** switch comes with a factory default fixed IP of **192.168.2.1**. So in order to access the switch's web user interface we first need to set the Merging network card to a fixed IP on the same subnet as the switch.


1. Open the **Windows Control Panel** and open the **Network and Sharing Center**.
2. Select **Change adapter settings**
3. Locate and select the Merging Technologies PCIe Ethernet card connection and Right-click on it.
4. Select **properties** from the drop-down menu to open the **Local Area Connection Properties** dialog:

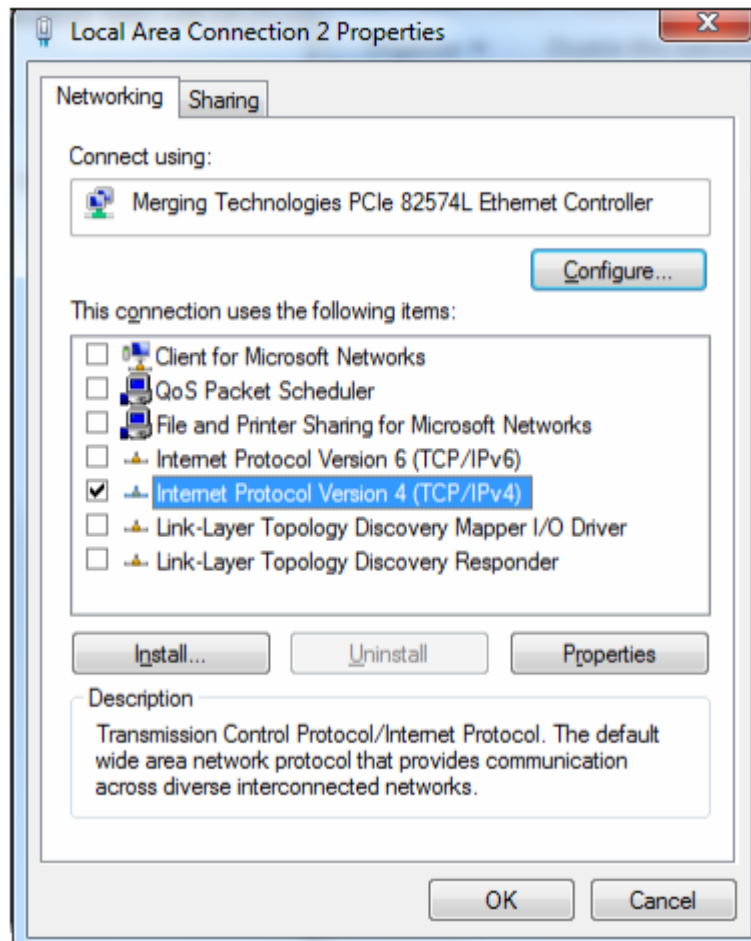

Local Area Connection Properties dialog

5. The networking tab should already have been configured as in the above screen shot by the Pyramix install. If this is not the case, please configure the card as seen above.

6. Select **Internet Protocol Version 4 (TCP/IPv4)** to select it and click on **Properties** to open the **properties** dialog ,

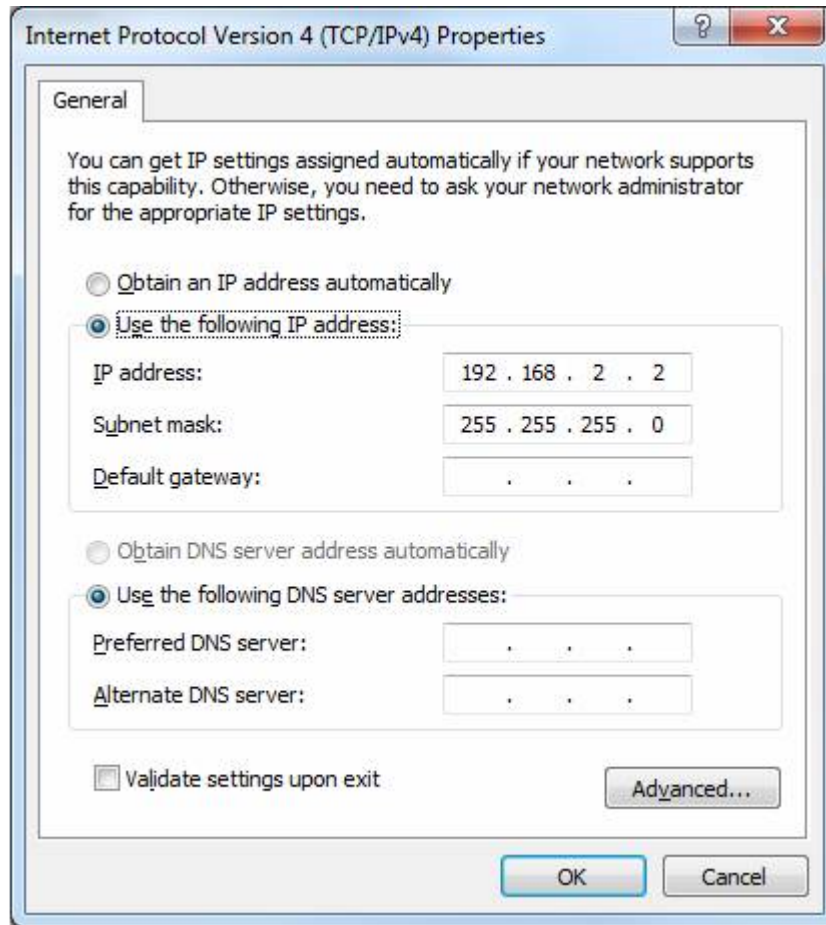

Internet Protocol Version 4 (TCP/IPv4) Properties dialog

7. Choose the **Use the following IP address:** radio button.
8. Set the **IP address:** to **192 : 168 . 2 . 2**
9. Set the **Subnet mask:** to **255 : 255 : 255 . 0**
10. Click on **OK** to accept the settings and close the dialogue. Repeat to accept the settings and close the **Local Area Connection Properties** dialog.

Configure the Switch

1. To access the switch with a browser, the switch needs to be in Managed Mode. If the Managed Mode LED on the front panel of the switch is not lit, use a paper clip to press the Managed Mode button through the small hole on the front right of the switch. Once the Managed Mode led is lit, the switch offers a web gui. It is also possible to configure the switch using the 9-pin serial connection at the back of the switch. If this is how you want to configure it, please refer to the switch's documentation.
2. Open a Web Browser (Internet Explorer is recommended for this configuration process.)
3. Enter **http://192.168.2.1** in the address bar and hit **Return** to access the Switch.
4. Login using the default credentials:

user: admin

password: admin

(Depending on the exact switch this field may need to be left blank. If in doubt consult the Dell 2816 Switch user guide.)

Note: If you cannot access the Switch remotely perform a reset to default factory settings. On the Dell Power Connect use a paper clip and press and hold for around ten seconds the button accessed via the small hole labeled **Managed Mode** to the right of the RJ-45 connectors. Afterwards make sure the indicator light **Managed Mode** to the left of

the RJ-45 connectors is lit in order to access and configure the switch. (Press the button once again briefly if necessary.) Repeat the reset procedure in the future if remote access does not work first time. It may take two or three minutes for the switch to become available after a reset.

Restore Saved Configuration dialog

5. Click on **Apply Changes**
6. Once logged into the switch select **Change Configuration**.


Note: The switch will then reboot (taking 2-3 minutes to do so)

In the left-hand pane click on **System > IP addressing** to expand it and click on **IP Interface parameters**

Dell IP Addressing > IP Interface Parameters page


7. Set the **IP Address** to **169.254.252.1** see screen shot above.

8. Click on **Apply Changes**. The connection to the switch will then be lost since the Merging Network card still has a fixed IP in a different range. Continue with points **9** to **12** to put the card back in IP auto-configure mode.
9. Open the **Windows Control Panel** and open the **Network and Sharing Center**.
10. Select **Change adapter settings**
11. Locate and select the Merging Technologies PCIe Ethernet card connection and Right-click on it.
12. Select **properties** from the drop-down menu to open the **Local Area Connection Properties** dialog:

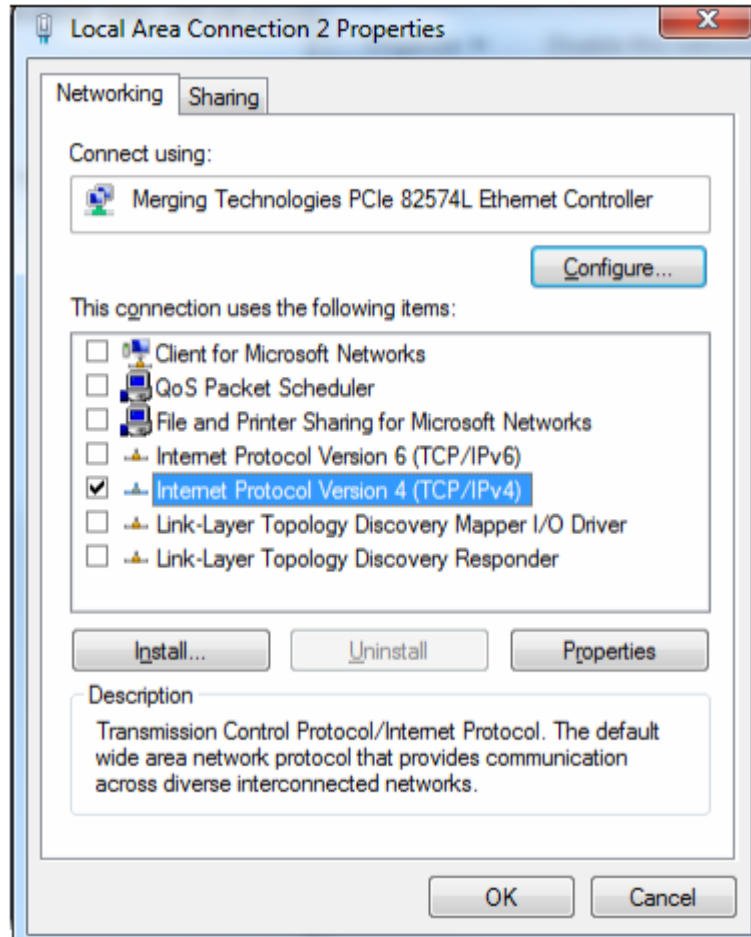

Local Area Connection Properties dialog

13. Select **Internet Protocol Version 4 (TCP/IPv4)** to select it and click on **Properties** to open the **properties** dialog:

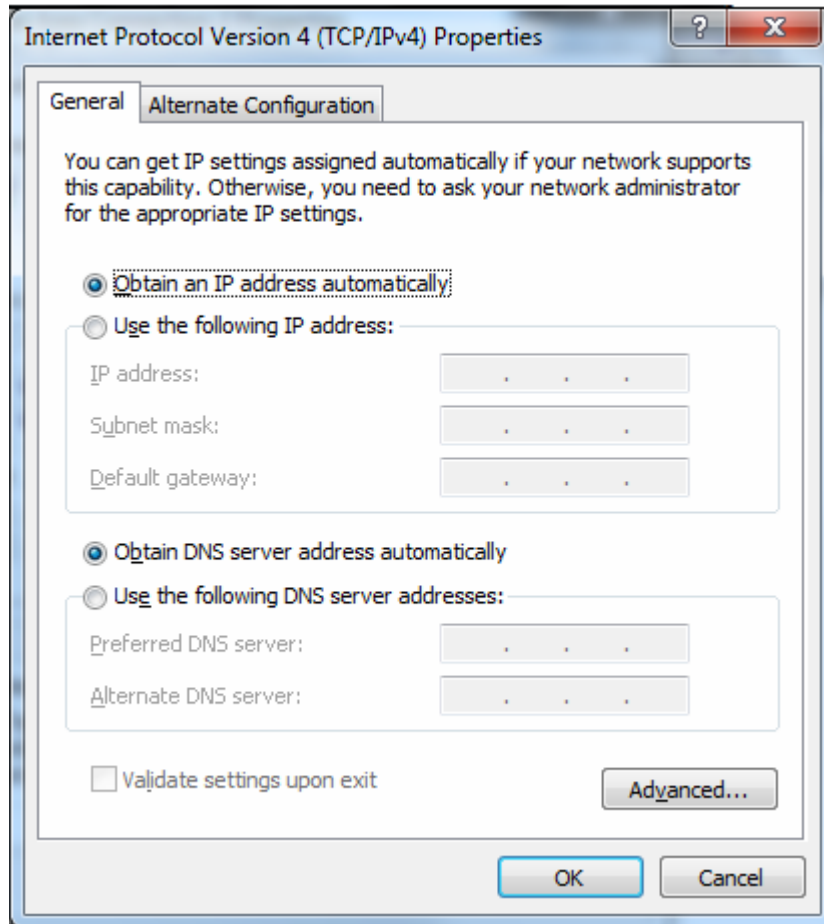

Internet Protocol Version 4 (TCP/IPv4) Properties dialog

14. This time choose the **Obtain an IP address automatically** radio button.
15. Click on **OK** to accept the settings and close the dialogue. Repeat to accept the settings and close the **Local Area Connection Properties** dialog.

Switch IP address


Now you can log into the switch using **http://169.254.252.1**

Note: If you cannot access the switch once it is set to **Obtain an IP address automatically** try setting the adaptor to **169.254.252.2** and retry. Ensure that after configuring the switch the setting is changed back to **Obtain an IP address automatically**.

Switch Configuration

The following steps will help you to configure the Switch for dedicated RAVENNA networking. First ensure you can access and log on to the Switch.

1. Open the **System > DHCP server > DHCP Server Properties** page:

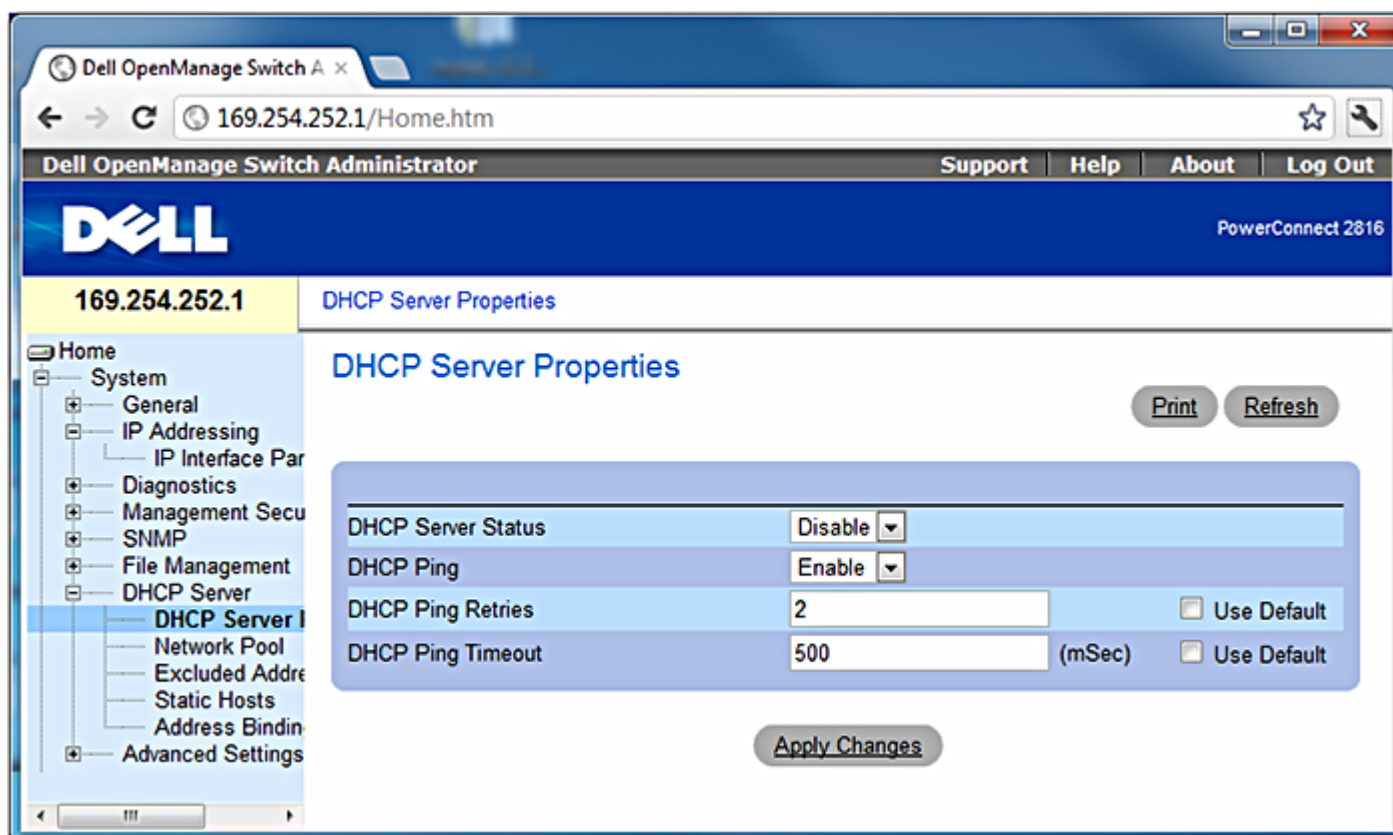

Dell DHCP Server > DHCP Properties page

2. Set the parameters as in the screen shot above.
3. Click on **Apply Changes**.

4. Open the **Switch > Ports > Port Configuration** page and select **Show All**:

Dell OpenManage Switch Administrator

DELL

169.254.252.1 Port Configuration

Home
System
Switch
Network Security
Ports
Port Config
LAG Config
Green Ethernet
Storm Control
Port Mirroring
Address Tables
Spanning Tree
VLAN
Link Aggregation
Multicast Support
Statistics/RMON
Quality of Service

Port Configuration

Port g1

Description (0-64 Characters)

Port Type 1000M copper

Admin Status Up

Current Port Status Down

Re-Activate Suspended Port

Operational Status Active

Admin Speed 1000M

Current Port Speed

Admin Duplex Full

Current Duplex Mode

Auto Negotiation Enable

Current Auto Negotiation

Admin Advertisement ☒ Max Capability ☐ 10 Half ☐ 10 Full ☐ 100 Half ☐ 100 Full ☐ 1000 Full

Current Advertisement Unknown

Negotiated Advertisement Unknown

Back Pressure Disable

Current Back Pressure

Flow Control Enable

Current Flow Control

MDIX Auto

Current MDIX

LAG

Apply Changes

Dell Switch > Ports > Port Configuration page

5. Set all the **Flow Control entries to **Disable**:**

OpenManage Switch Administrator

Port Configuration Table

169.254.253.1

	Port Status	Port Speed	Duplex Mode	Auto Negotiation	Back Pressure	Flow Control
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Down	1000M	Full	Enable	Disable	Disable
10M-copper	Up	10M	Full	Enable	Disable	Disable
10M-copper	Down	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Down	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Down	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Down	1000M	Full	Enable	Disable	Disable
10M-copper	Up	1000M	Full	Enable	Disable	Disable
10M-copper	Up	10M	Full	Enable	Disable	Disable

Back Next

Apply Changes

Dell Switch > Ports > Port Configuration Table

This setting minimizes latency on the RAVENNA Network.

6. Open the **Switch > Ports > Spanning Tree > STP Port Settings** page:

The screenshot shows the Dell OpenManage Switch Administrator web interface. The browser address bar displays `169.254.252.1/Home.htm`. The page title is "Dell OpenManage Switch Administrator". The left sidebar shows a navigation tree with the following items: Notification, File Management, DHCP Server, DHCP Service, Network Port, Excluded Address, Static Hosts, Address Binding, Advanced Settings, General Settings, Switch, Network Security, Ports, Port Configuration, LAG Configuration, Green Ethernet, Storm Control, Port Mirroring, Address Tables, Dynamic Address, Spanning Tree, Global Settings, STP Port Settings (selected), STP LAG Settings, Rapid Spanning Tree, VLAN, Link Aggregation, Multicast Support, Global Parameters, Bridge Multicast, Bridge Multicast, IGMP Snooping, Statistics/RMON, Quality of Service, and CoS Global Parameters. The main content area is titled "STP Port Settings" and contains a table of settings for port g1. The settings are as follows:

Setting	Value
Select a Port	g1
STP	Enable
Fast Link	☐
Root Guard	☐
Port State	Disabled
Role	Disabled
Speed	1000M
Path Cost (1-200000000)	4
Default Path Cost	☐
Priority	128
Designated Bridge ID	32768-d0:67:e5:8e:ee:4f
Designated Port ID	128-1
Designated Cost	0
Forward Transitions	1
LAG	

Buttons for "Print", "Refresh", "Show All", and "Apply Changes" are visible.

Dell Switch > Ports > Spanning Tree > STP Port Settings page

7. Click on **Show All**

STP Port Table

Refresh

Port	STP	Fast Link	Root Guard	Port State	Speed	Path Cost	Default Path Cost	Priority	Designated Bridge ID	Designated Port ID
1 g1	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
2 g2	Enable	☒	☐	Forwarding	1000M	4	☐	128	32768-d0:67:e5:75:3a:a2	128-2
3 g3	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
4 g4	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
5 g5	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
6 g6	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
7 g7	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
8 g8	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
9 g9	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
10 g10	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
11 g11	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
12 g12	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
13 g13	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
14 g14	Enable	☒	☐	Forwarding	1000M	4	☐	128	32768-d0:67:e5:75:3a:a2	128-14
15 g15	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A
16 g16	Enable	☒	☐	Disabled	1000M	100	☐	128	N/A	N/A

Apply Changes


Dell Switch > Ports > Spanning Tree > STP Port Settings: Show All: STP Port Table

8. In the STP Port Table window, check all **Fast Link** check boxes as shown in the screen shot above.

Note: Please ignore the **4** numeric entries in the **Path Cost** column and the **Port State** entries since these are derived from your current connection so these values may vary.

9. Click on **Apply Changes**.

10. Open the **Switch > Multicast Support > Global Parameters** page.

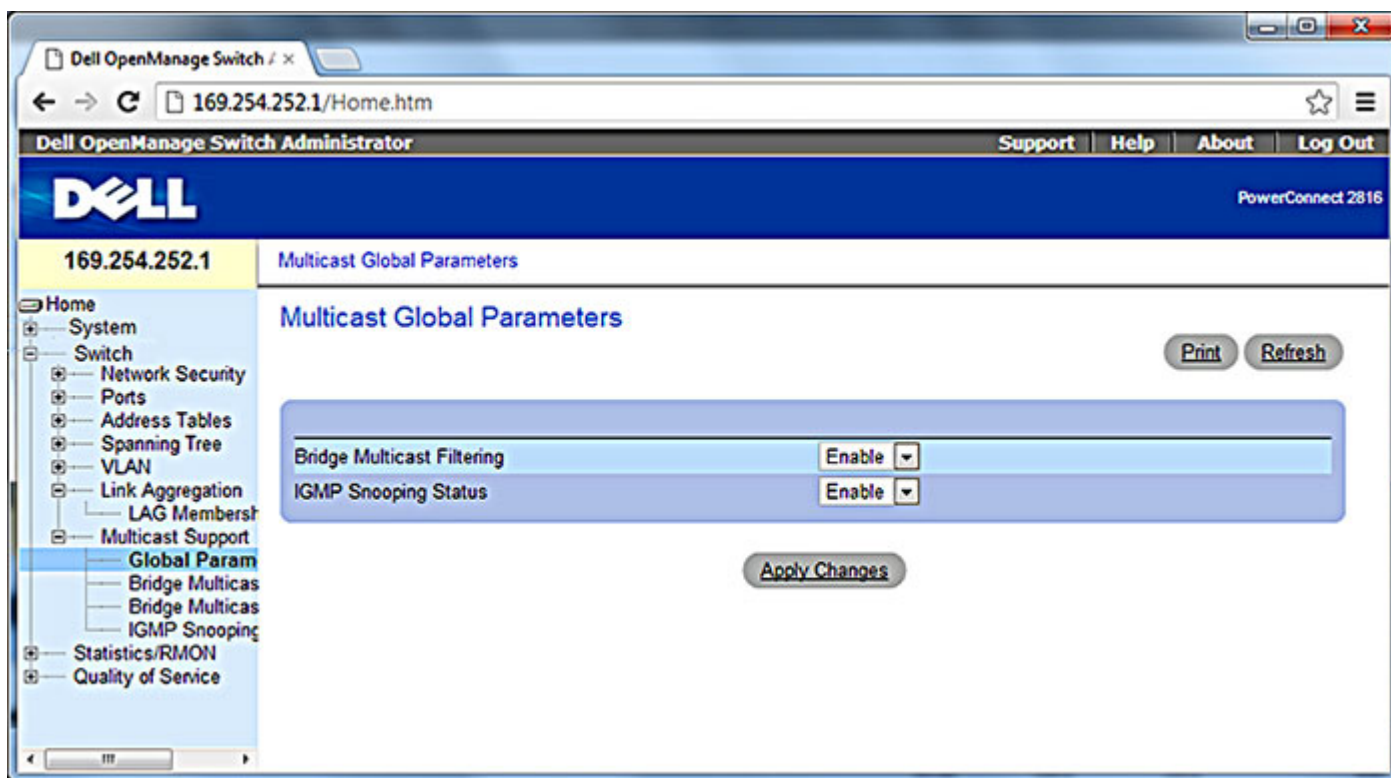

Dell Switch > Multicast Support > IGMP Snooping page

11. Set both drop-downs to **Enable** as in the screen shot above.

12. Open the **Switch > Multicast Support > IGMP Snooping** page:

The screenshot shows the Dell OpenManage Switch Administrator web interface. The browser address bar displays `169.254.252.1/Home.htm`. The page title is "Dell OpenManage Switch Administrator". The left navigation pane shows the tree structure: Home > Switch > Multicast Support > IGMP Snooping. The main content area is titled "IGMP Snooping" and contains the following configuration fields:

VLAN ID	1	
IGMP Snooping Status	Enable	
Auto Learn	Enable	
IGMP Querier Status	Enable	
Querier IP Address	169.254.252.1	
Host Timeout (60-2147483647)	260	(Sec)
Multicast Router Timeout (1-2147483647)	300	(Sec)
Leave Timeout (0-2147483647)	☒ 10	(Sec)
	☐ Immediate Leave	


Buttons for "Print", "Refresh", "Show All", and "Apply Changes" are visible.

Dell Switch > Multicast Support > IGMP Snooping page

13. Configure IGM Snooping as in the screen shot above. **Querier IP Address** needs to be the fixed IP address of the switch itself.

14. Click on **Apply Changes**.

15. Open the **Quality of Service > CoS Global Parameters > CoS Settings** page:

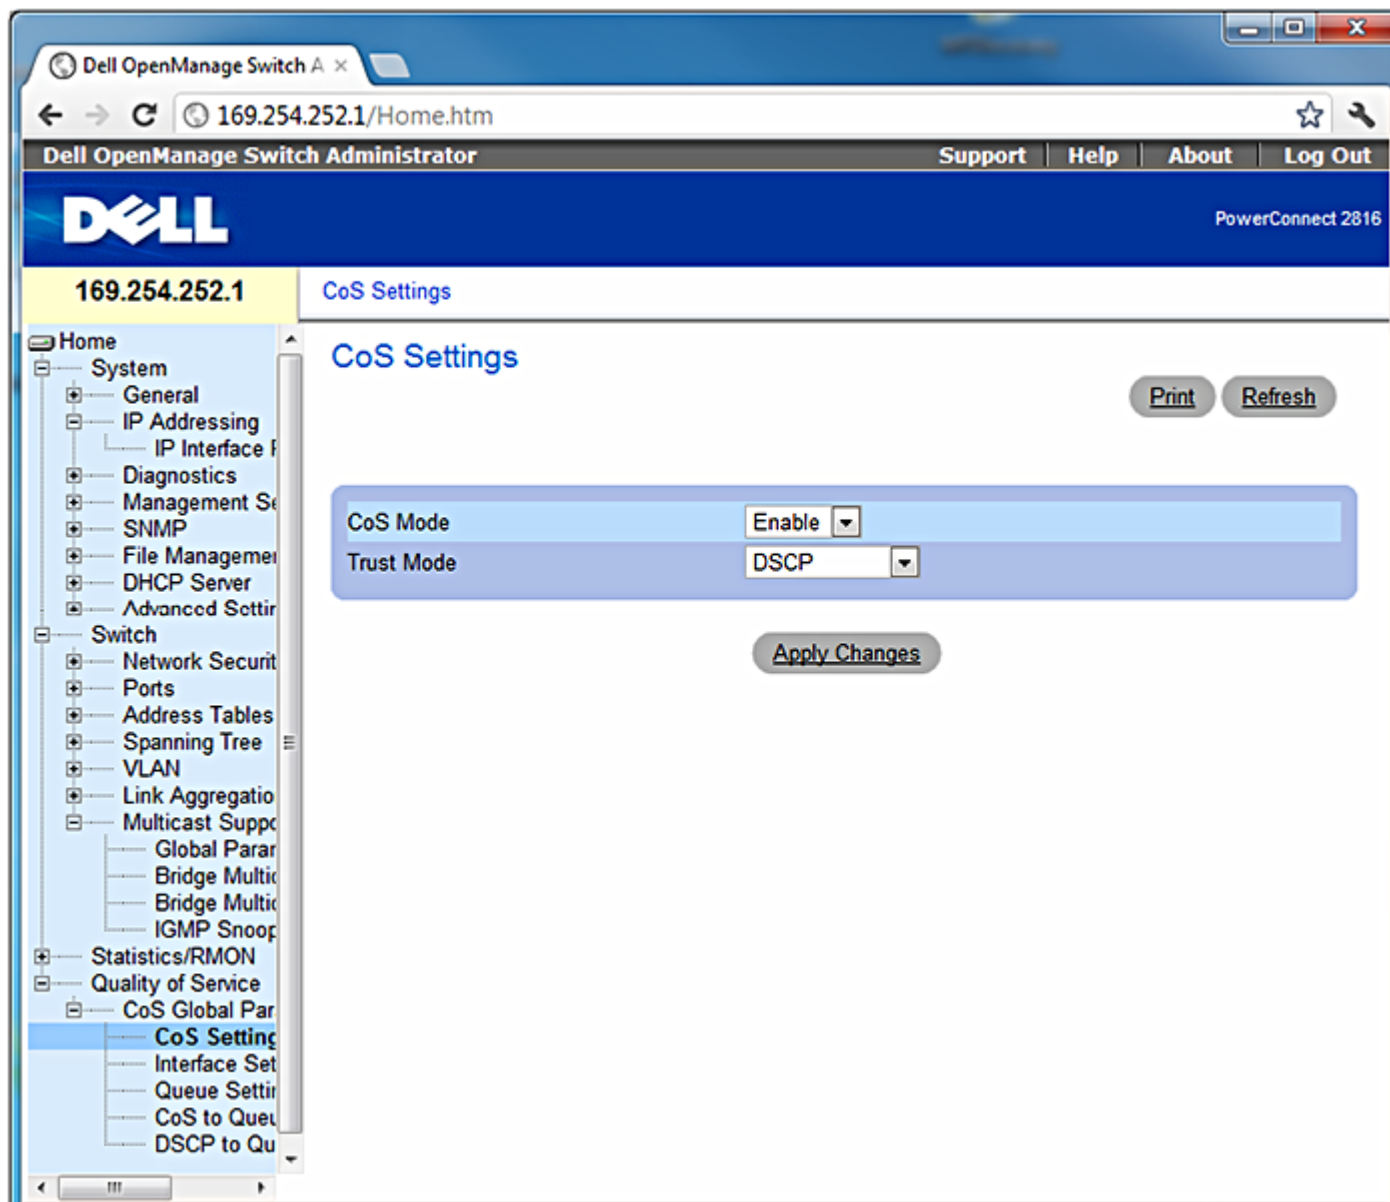

Dell Switch > Quality of Service > CoS Global Parameters > CoS Settings

16. Configure CoS settings as in the screen shot above.

17. Click on **Apply Changes**.

18. Open the **Quality of Service > DSCP to Queue Mapping** page:

Dell OpenManage Switch Administrator | 169.254.252.1 | Support | Help | About | Log Out

169.254.252.1 | **DSCP to Queue Mapping**

DSCP to Queue Mapping

Print Refresh

DSCP In	Queue	DSCP In	Queue	DSCP In	Queue
0	1	21	2	42	3
1	1	22	2	43	3
2	1	23	2	44	3
3	1	24	2	45	3
4	1	25	2	46	3
5	1	26	2	47	3
6	1	27	2	48	4
7	1	28	2	49	4
8	1	29	2	50	4
9	1	30	2	51	4
10	1	31	2	52	4
11	1	32	3	53	4
12	1	33	3	54	4
13	1	34	3	55	4
14	1	35	3	56	4
15	1	36	3	57	4
16	2	37	3	58	4
17	2	38	3	59	4
18	2	39	3	60	4
19	2	40	3	61	4
20	2	41	3	62	4
				63	4

Restore Defaults

Apply Changes

Dell Switch > Quality of Service > DSCP to Queue Mapping page

19. Configure DSCP to Queue Mapping as in the screen shot above.

20. Click on **Apply Changes**.

21. Log out of the switch which is now configured properly.



Connecting Multiple Horus' to the Switch

Once the switch is configured everything is prepared for connecting multiple Horus' to the switch ports.

1. Connect an RJ45 Ethernet patch cable (CAT5E or 6 STP) from the Merging PCIe Ethernet card (NET-MSC-GBEX1) to the switch.
2. Connect an RJ45 Ethernet patch cable (CAT5E or 6 STP) from each of your Horus devices Pri (primary) port to ports on the Switch.
3. Once you power up the Horus' one of the Horus' will automatically be chosen as Master PTP and the other Horus' will be PTP Slaves.

Note: When several Horus' are on the same network then one of them will be elevated automatically to PTP Master and the others configured as PTP slaves (see Horus User Manual).

4. You are now ready to work in RAVENNA mode.

Note: PTP sync does not permit synchronization to word clock or an audio input. However, this is not an issue since all Horus' will be synchronous. Only one Horus can lock to an external source; it then becomes the PTP master; other Horus' switch automatically to PTP slave (see Horus User Manual).

8 Contacting Merging

International Office:

Merging Technologies S.A.

Le Verney 4

CH-1070 Puidoux

Switzerland

Phone: +41 21 946 0444

Fax: +41 21 946 0445

UK:

Merging UK (Emerging)

23 Easter Park

Benyon Road

Silchester

Reading UK

RG7 2PQ

Phone: +44 (0) 118 402 5090

Fax: +44 (0) 870 1231747

Email: sales@merginguk.com

USA:

Merging USA (Independent Audio)

43 Deerfield Road

Portland,

ME 04101-1805

United States of America

Phone: +1 (207) 773 2424

Fax: +1 (207) 773 2422

For all documentation inquiries or suggestions for improvement:

<http://www.merging.com>

Index

C

Connecting Multiple Horus' to the Switch 54
 Contacting Merging 55
 CoS Settings 52

D

DHCP Server Properties 46
 DSCP to Queue Mapping 53

E

Easy Connect 13
 Accessing 13
 Activated Connection Example 16
 Additional Details 17
 Always on top 18
 Connection Status 16
 Local Computer RAVENNA Host 14
 Lock to Pyramix Sampling Rate 17
 Making a connection 14
 multiple Horus 18
 Network Accessible RAVENNA Device 14
 TimeCode Connections 16
 Troubleshooting 18

H

Horus/Hapi
 LTC I/O Native 21
 Horus/Hapi TimeCode Setup 19

I

IGMP Snooping 51
 Internet Protocol Version 4 (TCP/IPv4) 42, 45
 Introduction 5
 Introduction to RAVENNA Technology 7
 IP addressing 43

L

Local Area Connection Properties 41, 44
 LTC IN-OUT for Pyramix Native 20

M

Merging RAVENNA Easy Connect 13
 MT Discovery 10
 Actions 12
 Additional Information 12
 Color Coding 12
 Groups 11
 Overview 10
 Using 11

N

Network Switch 30

Q

Quality of Service 9

R

RAVENNA Technology 7
 Recommended certified switch 30

S

STP Port Settings 48

T

TimeCode
 3rd Party DAW Setup Mac 23
 3rd party DAW Setup Windows 22
 Horus/Hapi Setup 19
 Magix Setup 29
 Masscore Setup 21
 Nuendo 5 Setup 26
 Pro Tools Mac Setup 24
 Pro Tools PC Setup 25
 Pyramix Native Setup 20
 Reaper Setup 28
 Setup 19
 TimeCode Connections 16

