


PSI AUDIO - Re-assembling A14-M

Don't power up the electronics prior to assembling.

The cables need to be attached to the print and on the A14, the level axis needs to be attached to the potentiometer (see photo below)

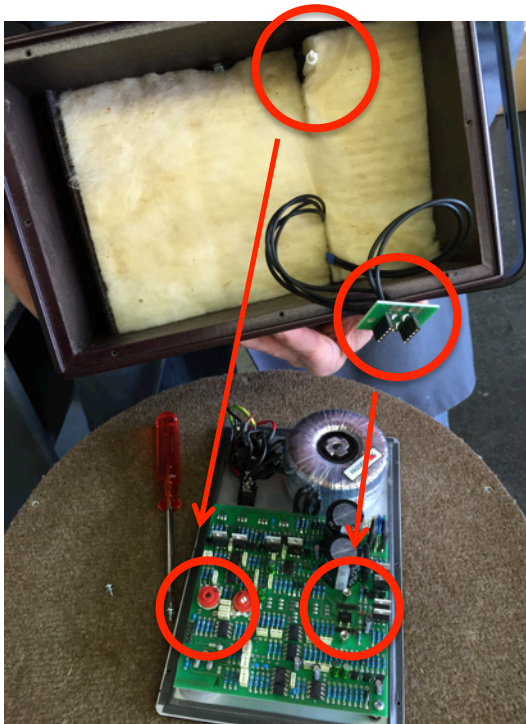

Attach cables to the print


Attach cables from the speaker onto the print and fasten with 2 screws. Make sure it is positioned the right way round and respecting polarity.



On the A14, the level axis needs to be attached to the potentiometer

Make sure the Level axis is turned to “cal”

Make sure the potentiometer is also in “cal” position

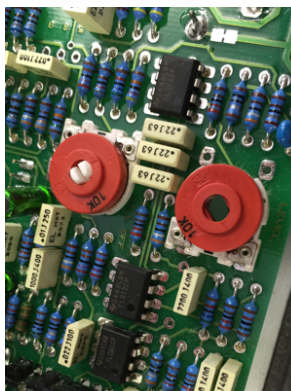

When assembling the back panel to the cabinet, take great care in positioning the level axis into the potentiometer. This can be quite tricky and the best is to use a light to see the axis through the level hole on the back panel.



Fasten screws on back panel

These screws are not meant to be removed and replace. Please don't fasten too tight, If necessary use a small drop of glue in the screw hole on the cabinet.

Replace sticker on level hole on back panel.

